

# Pilot's Operating Handbook

## *PiperSport*

equipped with analogue instrument package



**Airplane Registration Number: HB - WYL**

**Airplane Serial Number: P1001061**

This airplane must be operated in compliance with the information and limitations stated in this Manual.

*Intentionally left blank*

***PiperSport aircraft  
is designed and manufactured by:***



Czech Sport Aircraft a.s.  
Na Záhonech 1177/212, 686 04 Kunovice  
Czech Republic

Website: [www.czechsportaircraft.com](http://www.czechsportaircraft.com)  
E-mail: [office@czechsportaircraft.com](mailto:office@czechsportaircraft.com)  
Phone: +420 576 514 034 (Sales Dept.)  
Fax: +420 576 519 394

*Intentionally left blank*

## RECORD OF REVISIONS

Rev. No.	Affected pages	Revision name	Approved	Date

*Intentionally left blank*

## LIST OF EFFECTIVE PAGES

Section	Page	Date	Section	Page	Date
	i	2016-02-05	<b>2</b>		
	ii	2016-02-05	EASA approved	2-10	2016-02-05
	iii	2016-02-05	EASA approved	2-11	2016-02-05
	iv	2016-02-05	EASA approved	2-12	2016-02-05
	v	2016-02-05			
	vi	2016-02-05	<b>3</b>		
	vii	2016-02-05	EASA approved	3-1	2016-02-05
	viii	2016-02-05	EASA approved	3-2	2016-02-05
	ix	2016-02-05	EASA approved	3-3	2016-02-05
	x	2016-02-05	EASA approved	3-4	2016-02-05
	xi	2016-02-05	EASA approved	3-5	2016-02-05
	xii	2016-02-05	EASA approved	3-6	2016-02-05
	xiii	2016-02-05	EASA approved	3-7	2016-02-05
	xiv	2016-02-05	EASA approved	3-8	2016-02-05
	xv	2016-02-05	EASA approved	3-9	2016-02-05
	xvi	2016-02-05	EASA approved	3-10	2016-02-05
			EASA approved	3-11	2016-02-05
<b>1</b>			EASA approved	3-12	2016-02-05
	1-1	2016-02-05	EASA approved	3-13	2016-02-05
	1-2	2016-02-05	EASA approved	3-14	2016-02-05
	1-3	2016-02-05			
	1-4	2016-02-05	<b>4</b>		
	1-5	2016-02-05		4-1	2016-02-05
	1-6	2016-02-05		4-2	2016-02-05
				4-3	2016-02-05
				4-4	2016-02-05
<b>2</b>				4-5	2016-02-05
EASA approved	2-1	2016-02-05		4-6	2016-02-05
EASA approved	2-2	2016-02-05		4-7	2016-02-05
EASA approved	2-3	2016-02-05		4-8	2016-02-05
EASA approved	2-4	2016-02-05		4-9	2016-02-05
EASA approved	2-5	2016-02-05		4-10	2016-02-05
EASA approved	2-6	2016-02-05		4-11	2016-02-05
EASA approved	2-7	2016-02-05		4-12	2016-02-05
EASA approved	2-8	2016-02-05			
EASA approved	2-9	2016-02-05			

## LIST OF EFFECTIVE PAGES (Cont'd)

Section	Page	Date	Section	Page	Date
<b>5</b>			<b>7</b>		
EASA approved	5-1	2016-02-05		7-1	2016-02-05
EASA approved	5-2	2016-02-05		7-2	2016-02-05
EASA approved	5-3	2016-02-05		7-3	2016-02-05
EASA approved	5-4	2016-02-05		7-4	2016-02-05
EASA approved	5-5	2016-02-05		7-5	2016-02-05
EASA approved	5-6	2016-02-05		7-6	2016-02-05
EASA approved	5-7	2016-02-05		7-7	2016-02-05
EASA approved	5-8	2016-02-05		7-8	2016-02-05
EASA approved	5-9	2016-02-05			
EASA approved	5-10	2016-02-05	<b>8</b>		
EASA approved	5-11	2016-02-05		8-1	2016-02-05
EASA approved	5-12	2016-02-05		8-2	2016-02-05
				8-3	2016-02-05
<b>6</b>			EASA approved	8-4	2016-02-05
EASA approved	6-1	2016-02-05	EASA approved	8-5	2016-02-05
EASA approved	6-2	2016-02-05		8-6	2016-02-05
EASA approved	6-3	2016-02-05		8-7	2016-02-05
EASA approved	6-4	2016-02-05		8-8	2016-02-05
EASA approved	6-5	2016-02-05			
EASA approved	6-6	2016-02-05	<b>9</b>		
EASA approved	6-7	2016-02-05		9-1	2016-02-05
EASA approved	6-8	2016-02-05		9-2	2016-02-05
EASA approved	6-9	2016-02-05			
EASA approved	6-10	2016-02-05			
EASA approved	6-11	2016-02-05			
EASA approved	6-12	2016-02-05			
EASA approved	6-13	2016-02-05			
EASA approved	6-14	2016-02-05			
EASA approved	6-15	2016-02-05			
EASA approved	6-16	2016-02-05			



## LIST OF ABBREVIATIONS

ADI	Attitude direction indicator	
AGL	Above Ground Level	
ALT	Altitude or Altimeter	
ATC	Air Traffic Control	
ASI	Airspeed Indicator	
bar	Pressure unit	(1 bar = 14.5037 psi)
BEACON	Anti-collision beacon	
°C	Temperature in degree of Celsius	(°C = (°F - 32) / 1.8)
CAS	Calibrated Airspeed	
CDI	Course deviation indicator	
C.G.	Center of Gravity	
CHT	Cylinder head temperature	
COMM	Communication transceiver	
EFIS	Electronic Flight Information System	
ELT	Emergency Locator Transmitter	
EMS	Engine Monitoring System	
°F	Temperature in degree of Fahrenheit	(°F = (°C x 1.8) + 32)
ft	Foot or feet	(1 ft = 12 in = 0.305 m = 305 mm)
fpm	Vertical speed in feet per minute	(1 fpm = 0.0051 m/s)
GPS	Global Positioning System	
hp	Power unit	(1 hp = 0.7457 kW)
IAS	Indicated Airspeed	
IC	Intercom	
IFR	Instrument Flight Rules	
in	Inch	(1 in = 25.4 mm)
ISA	International Standard Atmosphere	
KCAS	Calibrated Airspeed in Knots	
kg	Kilogram	(1 kg = 2.205 lb)
KIAS	Indicated Airspeed in Knots	
km	Kilometer	(1 km = 1000 m = 0.54 NM = 0.621 SM)
km/h	Speed in kilometers per hour	(1 km/h = 0.54 knots = 0.621 mph = 0.278 m/s)
knot	Speed in NM per hour	(1 knot = 1.151 mph = 1.852 km/h = 0.514 m/s)
KTAS	True Airspeed in Knots	
kW	Power unit	(1 kW = 1.341 hp)
L	Liter	(1L = 0.22 UK gal = 0.264 US gal)
lb	Pound	(1 lb = 0.454 kg)
lbf	Force unit	(1 lbf = 4.448 N)
m	Meter	(1 m = 1000 mm = 3.28 ft = 39.37 in)
mm	Millimeter	(1 mm = 0.03937 in)
MAC	Mean Aerodynamic Chord	
max.	Maximum	
min.	Minimum or minute	
mph	Speed in statute miles per hour	(1 mph = 0.87 knots = 1.61 km/h)

MTOW	Maximum TakeOff Weight	
m/s	Speed in meters per second	<i>(1 m/s = 196.8 fpm = 1.944 knots = 3.6 km/h)</i>
N	Newton - force unit	<i>(1 N = 0.225 lbf)</i>
NM	Nautical mile	<i>(1 NM = 1,852 m)</i>
OFF	System is switched off or control element is in off-position	
ON	System is switched on or control element is in on-position	
OAT	Outside Air Temperature	
POH	Pilot's Operating Handbook	
psi	Pressure unit - pound per square inch	<i>(1psi = 0.0689 bar)</i>
rpm	Revolutions per minute	
s or sec	Second	
SM	Statute Mile	<i>(1SM = 1,609 m)</i>
TAS	True Airspeed	
US gal	US gallon	<i>(1 US gal = 0.83 UK gal = 3.785 L)</i>
V	Volt	
VFR	Visual Flight Rules	
VMC	Visual Meteorological Conditions	
VSI	Vertical Speed Indicator	
VTU	Vertical tail unit	
V <sub>A</sub>	Manoeuvring airspeed	
V <sub>FE</sub>	Maximum flaps extended speed	
V <sub>NE</sub>	Never exceed speed	
V <sub>NO</sub>	Maximum structural cruising speed	
V <sub>S</sub>	Stall speed with wing flaps in retracted position	
V <sub>S1</sub>	Stall speed with wing flaps in takeoff position	
V <sub>SO</sub>	Stall speed with wing flaps in extended position	
V <sub>X</sub>	Best angle of climb speed	
V <sub>Y</sub>	Best rate of climb speed	

## ASTM STANDARDS

The *PiperSport* aircraft is designed and built according to following ASTM LSA standards.

### **ASTM F 2245 – 09**

Standard Specification for Design and performance of a Light Sport Airplane

### **ASTM F 2279 – 10**

Standard Practice for Quality Assurance in Manufacture of Fixed Wing Light Sport Aircraft

### **ASTM F 2295 – 10**

Standard Practice for Continued Operational Safety Monitoring of a Light Sport Aircraft

### **ASTM F 2316 – 08**

Standard Specification for Airframe Emergency Parachutes for Light Sport Aircraft

### **ASTM F 2746 – 09**

Standard Specification for Pilot's Operating Handbook (POH) for Light Sport Airplane

*Intentionally left blank*

## CONTACT INFORMATION



CZECH  
SPORT AIRCRAFT

Czech Sport Aircraft a.s.  
Na Záhonech 1177/212, 686 04 Kunovice  
Czech Republic

Website: [www.czechsportaircraft.com](http://www.czechsportaircraft.com)  
E-mail: [office@czechsportaircraft.com](mailto:office@czechsportaircraft.com)  
Phone: +420 576 514 034 (Sales Dept.)  
Fax: +420 576 519 394

*Intentionally left blank*

## TABLE OF CONTENTS

1. General Information
2. Limitations
3. Emergency Procedures
4. Normal Procedures
5. Performance
6. Weight and Balance
7. Description of Airplane and Systems
8. Handling and Servicing
9. Supplements

*Intentionally left blank*



# **SECTION 1**

## **TABLE OF CONTENTS**

### **1. GENERAL INFORMATION**

<b>1.1 Airplane specification</b>	<b>1-2</b>
<b>1.2 Summary of performances</b>	<b>1-5</b>

# 1. GENERAL INFORMATION

This Pilot's Operating Handbook (POH) has been prepared to provide pilots with information for the safe and efficient operation of the *PiperSport* aircraft and contains 9 sections. It also contains supplementary information considered to be important by the aircraft manufacturer.

Date of issue is written in the yy-mm-dd format.

**NOTE**

*All airspeeds shown in the POH are IAS, except of shown otherwise.*

## Warnings, Cautions and Notes

The following definitions apply to warnings, cautions and notes in the POH.

**WARNING**

*Means that the non-observation of the corresponding procedure leads to an immediate or important degradation of the flight safety i.e. to injury or death of persons.*

**CAUTION**

*Means that the non-observation of the corresponding procedure leads to a minor or possible long term degradation of the flight safety.*

**NOTE**


*Draws attention to any special item not directly related to safety but which is important or unusual.*

## 1.1 Airplane specification

*PiperSport* is the airplane intended especially for recreational and cross-country flying, and non-aerobatics operation.

*PiperSport* is a single-engine, all metal, low-wing monoplane of semi-monocoque structure with two side-by-side seats. The airplane is equipped with a fixed tricycle undercarriage with castoring nose wheel.

**PiperSport aircraft layout:**

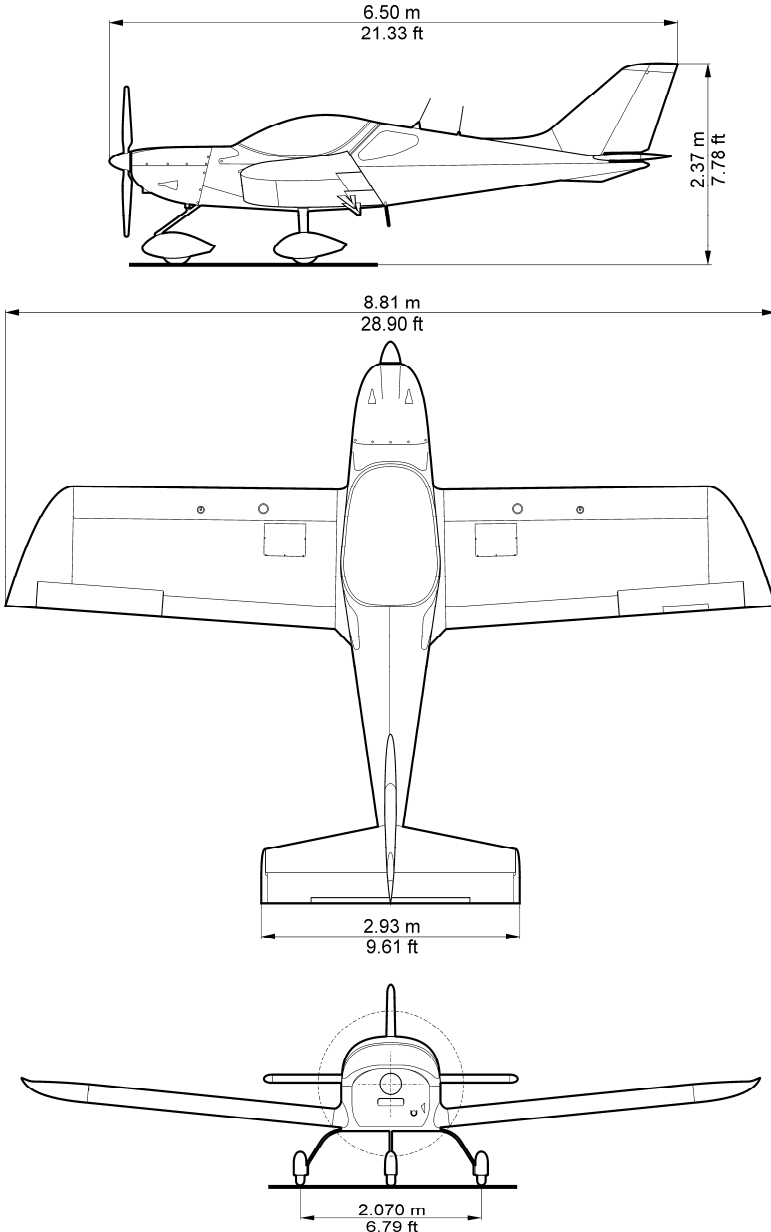

**Main airplane dimensions:**

Wing span .....	8.81 m
Length .....	6.50 m
Height .....	2.37 m
Wing area .....	12.30 m <sup>2</sup>
Wing loading .....	49 kg/m <sup>2</sup>
Cockpit width .....	1.17 m

**Flight control surfaces travel:**

Rudder.....	30° to each side	±2°
Elevator .....	+28° / -25°	±2°
Aileron .....	+20° / -15°	±2°
Flaps.....	0° to 30°	±1°
Aileron trim .....	+20° / -20°	±2°
Elevator trim .....	+22° / -26°	±2°

**Engine:**

Manufacturer .....	BRP-Powertrain GmbH&Co.KG
Model number.....	912 ULS2
Maximum power rating .....	73.5 kW at 5,800 RPM
Cooling .....	liquid and air
Type.....	4-stroke, 4 cylinder, horizontally opposed, spark ignition engine with one central camshaft-push-rod-OHV

**Propeller:**

Manufacturer .....	WOODCOMP s.r.o.
Model number.....	KLASSIC 170/3/R
Number of blades .....	3
Diameter.....	1,712 mm
Type.....	three composite blades, ground adjustable

## 1.2 Summary of performances

### Weights:

Max. takeoff and landing weight .....	600 kg
Max. weight of fuel .....	82 kg
Max. baggage weight in rear fuselage .....	18 kg
Max. baggage weight in each wing locker .....	20 kg
Maximum empty weight .....	405 kg

**NOTE**

*Actual empty weight is shown in Section 9, Supplement No. 02*

Wing loading .....	49 kg/m <sup>2</sup>
Power loading .....	8.15 kg/kW

### Speeds:

Maximum at sea level .....	119 KIAS
Cruise, 75% power at 3,000 ft .....	93 KIAS

### Range and endurance:

Range .....	512 NM	(948 km)
Endurance .....	5:26 h:mm	

#### Conditions:

Usable fuel .....	113 L
75% power of engine .....	5,000 RPM
Altitude .....	3,000 ft
Reserve .....	30 minutes

**Rate of climb:**

At sea level.....	825 fpm
Best angle of climb speed ( $v_x$ ).....	55 KIAS
Best rate of climb speed ( $v_y$ ) .....	62 KIAS

**Stall speeds:**

$V_{S0}$ – flaps down, power - idle .....	32 KIAS
$V_S$ – flaps up, power - idle.....	39 KIAS

**Fuel:**

Total fuel capacity .....	114 L
Total usable fuel .....	113 L
Approved types of fuel.....	see chapter 2.11

**Engine power:**

Maximum power at 5,800 RPM .....	73.5 kW
Max. continuous power at 5,500 RPM.....	69 kW

# **SECTION 2**

## **TABLE OF CONTENTS**

### **2. LIMITATIONS**

<b>2.1</b>	<b>Airspeed indicator range markings</b>	<b>2-2</b>
<b>2.2</b>	<b>Stalling speeds at maximum takeoff weight</b>	<b>2-2</b>
<b>2.3</b>	<b>Flap extended speed range</b>	<b>2-3</b>
<b>2.4</b>	<b>Maneuvering speed</b>	<b>2-3</b>
<b>2.5</b>	<b>Maximum structural cruising speed</b>	<b>2-3</b>
<b>2.6</b>	<b>Never exceed speed</b>	<b>2-3</b>
<b>2.7</b>	<b>Service ceiling</b>	<b>2-3</b>
<b>2.8</b>	<b>Load factors</b>	<b>2-3</b>
<b>2.9</b>	<b>Approved maneuvers</b>	<b>2-3</b>
<b>2.10</b>	<b>Operating weights and loading</b>	<b>2-4</b>
<b>2.11</b>	<b>Fuel</b>	<b>2-5</b>
<b>2.12</b>	<b>Engine operating speeds and limits</b>	<b>2-6</b>
<b>2.13</b>	<b>Engine instruments markings</b>	<b>2-7</b>
<b>2.14</b>	<b>Other limitations</b>	<b>2-7</b>
<b>2.15</b>	<b>Limitation placards and markings</b>	<b>2-9</b>
<b>2.16</b>	<b>Miscellaneous placards and markings</b>	<b>2-10</b>

## 2. LIMITATIONS

**CAUTION**

*Airspeeds values are valid for standard AVIATIK WA037383 pitot-static probe.*

### 2.1 Airspeed indicator range markings

**NOTE**

*The stated stall speeds are valid for all flight altitudes.*

Marking	Speeds value or range	Significance
	KIAS	
White arc	<b>32-75</b>	Flap Operating Range.
Green arc	<b>39-108</b>	Normal Operating Range.
Yellow arc	<b>108-138</b>	Maneuvers must be conducted with caution and only in smooth air.
Red line	<b>138</b>	Maximum speed for all operations.

### 2.2 Stalling speeds at maximum takeoff weight

Wing flaps position: - retract (0°)  
 - takeoff (12°)  
 - landing (30°)

Conditions: Weight: MTOW Engine: idle	Wing flaps pos.	Stall speeds		Altitude loss at recovery ft
		KIAS	KCAS	
Wing level stall	0°	39	43	213
	12°	35	39	160
	30°	32	37	108
Coordinated turn 30° bank	0°	42	46	269
	12°	38	42	216
	30°	35	39	160



**NOTE**

*Altitude losses shown in the table present max. values determined on the basis of flight tests using average piloting skill.*

**2.3 Flap extended speed range -  $V_{S0}$  to  $V_{FE}$**

Flaps operating range ..... 32 - 75 KIAS

**2.4 Maneuvering speed -  $V_A$**

Maneuvering speed at 600 kg ..... 88 KIAS

**2.5 Maximum structural cruising speed –  $V_{NO}$**

Maximum structural cruising speed ..... 108 KIAS

**2.6 Never exceed speed -  $V_{NE}$**

Never exceed speed..... 138 KIAS

**2.7 Service ceiling**

Service ceiling ..... 15,090 ft

**2.8 Load factors**

Maximum positive limit load factor..... + 4 g

Maximum negative limit load factor ..... - 2 g

Maximum positive limit load factor with flaps extended..... + 2 g

Maximum negative limit load factor with flaps extended..... ..0 g

**2.9 Approved maneuvers**

The *PiperSport* is approved for normal and below listed maneuvers:

- Steep turns not exceeding 60° bank
- Lazy eights
- Chandelles
- Stalls (except whip stalls)

## 2.10 Operating weights and loading

Max. takeoff weight.....	600 kg
Max landing weight.....	600 kg
Max. weight of fuel.....	82 kg
Max. baggage weight in rear fuselage.....	18 kg
Max. baggage weight in each wing locker.....	20 kg
Maximum empty weight.....	405 kg

**NOTE**

*Actual empty weight is shown in Section 9, Supplement No. 02*

**WARNING**

*Do not exceed maximum takeoff weight 600 kg.*

Number of seats.....	2
Minimum crew ( <i>only on the left seat</i> ).....	1 pilot
Minimum crew weight.....	55 kg
Maximum crew weight on each seat.....	115 kg

## 2.11 Fuel

### Fuel volume:

Wing fuel tanks capacity .....	2x 57 L
Total fuel capacity .....	114 L
Unusable fuel .....	2x 0.5 L
Total usable fuel .....	113 L
Maximum allowable difference in fuel tanks .....	30 L

### Recommended fuel type:

**NOTE**

*Refer to the Rotax Operator's Manual, Rotax Service Instruction SI-912-016*

### MOGAS

European standards	- min. RON 95, EN 228 Super, EN 228 Super plus
US standard	- ASTM D4814
Canadian standards	- min. AKI 91, CAN/CGSB-3.5 Quality 3

**CAUTION**

*Fuels that contain more than 5 % ethanol blend have not been tested and are not permitted for use.*

### AVGAS

US standard- AVGAS 100 LL (ASTM D910)

AVGAS 100 LL places greater stress on the valve seats due to its high lead content and forms increased deposits in the combustion chamber and lead sediments in the oil system. Thus it should only be used in case of problems with vapor lock or when other types of gasoline are unavailable.

## 2.12 Engine operating speeds and limits

<b>Engine Model:</b>		ROTAX 912 ULS2
<b>Engine Manufacturer:</b>		BRP-Powertrain GmbH
<b>Power</b>	<i>Max. takeoff:</i>	73.5 kW at 5,800 rpm (max. 5 min.)
	<i>Max. continuous:</i>	69 kW at 5,500 rpm
	<i>Cruising (75%):</i>	51 kW at 5,000 rpm
<b>Engine speed</b>	<i>Max. takeoff:</i>	5,800 rpm (max. 5 min.)
	<i>Max. continuous:</i>	5,500 rpm
	<i>Cruising (75%):</i>	5,000 rpm
	<i>Idling:</i>	1,400 rpm (minimum)
<b>Oil pressure</b>	<i>Minimum:</i>	0.8 bar below 3,500 rpm
	<i>Maximum:</i>	7 bar cold engine starting
	<i>Normal:</i>	2 - 5 bar above 3,500 rpm
<b>Oil temperature</b>	<i>Minimum:</i>	50 °C
	<i>Maximum:</i>	130 °C
	<i>Normal:</i>	90 - 110 °C
<b>Cylinder head temp. (CHT)</b>	<i>Maximum:</i>	135 °C
<b>Exhaust gas temp. (EGT)</b>	<i>Nominal:</i>	800 °C
	<i>Maximum:</i>	850 °C
	<i>Max. takeoff:</i>	880 °C
<b>Fuel press.</b>	<i>Minimum:</i>	2.2 psi (0.15 bar)
	<i>Maximum:</i>	5.8 psi (0.4 bar)
<b>Engine start, operating temperature</b>	<i>Minimum:</i>	-25 °C
	<i>Maximum:</i>	50 °C
<b>Limit of engine operation at zero gravity and in negative "g" condition</b>		
	<i>Maximum:</i>	5 seconds at max. -0.5 g

## 2.13 Engine instruments markings

Rotax 912 ULS2 73.5 kW (98.6 hp)	Minimum Limit (red line)	Caution Range (yellow arc)	Normal Operating Range (green arc)	Caution Range (yellow arc)	Maximum Range (red line)
Engine speed RPM	-	0-1,400	1,400-5,500	5,500-5,800	5,800
Oil Pressure	0.8 bar	0.8-2 bar	2-5 bar	5-7 bar	7 bar
Oil Temperature	50 °C	50-90 °C	90-110 °C	110-130 °C	130 °C
Cylinder head Temperature (CHT)	-	to 50 °C	50-135 °C	-	135 °C
Fuel Pressure	2.2 psi (0.15 bar)	-	2.2-5.8 psi (0.15-0.4 bar)	-	5.8 psi (0.4 bar)

## 2.14 Other limitations

- **No smoking on board of the aircraft!**
- **Approved for Day VFR flights only.**
- **Flight in rain**

When flying in the rain, no additional steps are required.

Aircraft qualities and performance are not substantially changed.

However **VMC must be maintained!**

- **Minimum instruments and equipment list for Day VFR flights:**
  - Airspeed indicator
  - Altimeter
  - Compass (is not required by ASTM F2245)
  - Fuel quantity indicator
  - Tachometer (RPM)
  - Engine instruments as required by the engine manufacturer :
    - *Oil temperature indicator*
    - *Oil pressure indicator*
    - *Cylinder head temperature indicator*
  - Safety harness for every used seat

**WARNING**

*IFR flights and intentional flights under icing conditions are PROHIBITED!*

**WARNING**

*Minimum 6 L of fuel quantity allows approximately 15 minutes of safe operation!*

## 2.15 Limitation placards and markings

### *Operating limitation on instrument panel*

<b>AIRSPEDS:</b>	
<b>V<sub>NE</sub></b>	<b>138 kts</b>
<b>V<sub>A</sub></b>	<b>88 kts</b>
<b>V<sub>FE</sub></b>	<b>75 kts</b>
<b>V<sub>SO</sub></b>	<b>32 kts</b>

**WARNING!**  
DO NOT EXCEED MAXIMUM  
TAKEOFF WEIGHT: 600kg/1320lbs

**WARNING!**  
IFR FLIGHTS AND INTENTIONAL FLIGHTS  
UNDER ICING CONDITIONS ARE PROHIBITED

**APPROVED FOR: DAY - VFR**

### *Operating limitation in baggage space*

 **BAGGAGE COMPARTMENT**   
MAX. BAGGAGE WEIGHT: 18kg/40lbs

MAX. WEIGHT IN WING LOCKER: 20kg / 44lbs

### *Passenger warning*

**THIS AIRCRAFT IS NOT TYPE CERTIFIED AND IS  
ACCEPTED FOR EASA PERMIT TO FLY. SEE THE  
RELATED EASA APPROVED FLIGHT CONDITIONS  
FOR THE OPERATIONAL LIMITATIONS AND  
AIRWORTHINESS CONDITIONS.**

*Prohibited maneuvers*

**NO INTENTIONAL SPINS!  
AEROBATICS PROHIBITED!**

**2.16 Miscellaneous placards and markings**

**PILOT  
HEADSET**

**MUSIC IN  
COPILOT  
HEADSET**

**↑ MAX  
POWER  
↓ IDLE**

**↑ OFF  
CHOKE  
↓ ON**

**↑  
C  
O  
P  
E  
N  
↓**

**12V**

**FUEL  
PUMP**

**LOW  
VOLT**

**UP**  
**FLAPS**  
**DOWN**

**0°  
12°  
30°**

**BUZZER ELT CONTROL**

**CARBURETOR  
PULL  
HOT  
AIR**

**PUSH  
OFF  
CABIN  
HEATER  
ON  
PULL**

**PUSH  
OFF  
PARKING  
BRAKE  
ON  
PULL**



✓ PEDAL SETTING

PEDAL SETTING ↘

**FUEL CAPACITY:  
57 Litres / 15 US Gal.  
MOGAS RON 95/AKI 91  
AVGAS 100 LL**

**CANOPY OPENED**

**CANOPY CLOSED**

**FUEL DRAIN ↘**

**1.8<sup>+0.2</sup> bar**

**AEROSHELL OIL  
SPORT PLUS 4**

**1.2<sup>+0.1</sup> bar**

**NO PUSH**

**NO STEP**



- located on the both sides of fuselage between canopy and rear window

This aircraft is equipped with a ballistically-deployed emergency parachute system



- located in place rocket egress

Rocket Deployed Parachute Egress Area  
**STAY CLEAR**  
Emergency information at: [www.BRSparachutes.com](http://www.BRSparachutes.com)  
or call (651) 457-7491 – after hours & weekends call (763) 226-6110

**CAUTION**

*The owner (operator) of this airplane is responsible for the readability of placards during the aircraft service life.*

# **SECTION 3**

## **TABLE OF CONTENTS**

### **3. EMERGENCY PROCEDURES**

<b>3.1</b>	<b>General information</b>	<b>3-3</b>
<b>3.2</b>	<b>Airspeeds for Emergency procedures</b>	<b>3-3</b>
<b>3.3</b>	<b>Engine failure during takeoff run</b>	<b>3-4</b>
<b>3.4</b>	<b>Engine failure after takeoff</b>	<b>3-4</b>
<b>3.5</b>	<b>Loss of engine power in flight</b>	<b>3-4</b>
<b>3.6</b>	<b>In-flight engine starting</b>	<b>3-4</b>
<b>3.7</b>	<b>Loss of oil pressure</b>	<b>3-5</b>
<b>3.8</b>	<b>High oil pressure</b>	<b>3-5</b>
<b>3.9</b>	<b>Emergency landing without engine power</b>	<b>3-6</b>
<b>3.10</b>	<b>Precautionary landing with engine power</b>	<b>3-6</b>
<b>3.11</b>	<b>Engine fire during start</b>	<b>3-7</b>
<b>3.12</b>	<b>Engine fire in flight</b>	<b>3-7</b>
<b>3.13</b>	<b>Electrical fire in flight</b>	<b>3-8</b>
<b>3.14</b>	<b>Emergency descent</b>	<b>3-8</b>
<b>3.15</b>	<b>Generator failure</b>	<b>3-8</b>
<b>3.16</b>	<b>Overvoltage</b>	<b>3-9</b>
<b>3.17</b>	<b>Inadvertent spin recovery</b>	<b>3-9</b>
<b>3.18</b>	<b>Inadvertent icing encounter</b>	<b>3-10</b>
<b>3.19</b>	<b>Obstruction of air into engine filter</b>	<b>3-10</b>
<b>3.20</b>	<b>Engine vibration</b>	<b>3-11</b>
<b>3.21</b>	<b>Landing with a flat tire</b>	<b>3-11</b>
<b>3.22</b>	<b>Landing with a defective landing gear</b>	<b>3-11</b>
<b>3.23</b>	<b>Loss of primary instruments</b>	<b>3-11</b>

<b>3.24 Loss of flight controls</b>	<b>3-12</b>
<b>3.25 Power lever linkage failure</b>	<b>3-12</b>
<b>3.26 Inadvertent canopy opening during takeoff</b>	<b>3-13</b>
<b>3.27 BRS activation</b>	<b>3-14</b>

## 3. EMERGENCY PROCEDURES

### 3.1 General information

This section provides checklists and amplified procedures for coping with various emergencies that may occur. Emergencies caused by aircraft or engine malfunction are extremely rare if proper pre-flight inspections and maintenance are practiced.

However, should an emergency arise, the basic guidelines described in this section should be considered and applied as necessary to correct the problem.

#### **CAUTION**

*Airspeeds values are valid for standard AVIATIK WA037383 pitot-static probe. These emergency procedures are valid for WOODCOMP KLASSIC 170/3/R three composite blades ground adjustable propeller.*

### 3.2 Airspeeds for Emergency procedures

Engine failure after takeoff ..... 60 KIAS  
(flaps as necessary)

Maneuvering speed at 600 kg ..... 88 KIAS  
(flaps retracted (0°))

Gliding speed ..... 60 KIAS  
(flaps retracted (0°))

Precautionary landing with engine power ..... 60 KIAS  
(flaps in landing position (30°))

Emergency landing without engine power ..... 60 KIAS  
(flaps as necessary)

Emergency descent ..... 138 KIAS  
(flaps retracted (0°))

### 3.3 Engine failure during takeoff run

1. THROTTLE - **IDLE**
2. Brakes - apply
3. Ignition Switch - **OFF**

### 3.4 Engine failure after takeoff

1. Airspeed - maintain *60 KIAS*
2. Flaps - as necessary
3. **FUEL** selector - **OFF**
4. Ignition Switch - **OFF**
5. **MASTER** - OFF - *before landing*
6. Land straight ahead, turning only to avoid obstacles

**NOTE**

*Altitude loss during 180° turn is approximately 400 ft.*

### 3.5 Loss of engine power in flight

1. Airspeed - maintain *60 KIAS*
2. Altitude - in accordance with actual altitude:
  - restart engine according to 3.6 or
  - search for a suitable place and perform emergency landing according to 3.9

### 3.6 In-flight engine starting

1. All unnecessary electrical equipment switch - OFF
2. **MASTER** - ON
3. **ENG INST** - ON
4. **FUEL P** - ON
5. **FUEL** selector - **LEFT** or **RIGHT** (*to tank with more quantity of fuel*); check correct position - green mark (see Chapter 7.11)

- 6. THROTTLE - **IDLE**
- 7. Ignition Switch - hold **START**  
after engine is starting - **BOTH**

After engine is running:

- 8. **AVIONICS** - ON
- 9. **FUEL P** - OFF
- 10. Other switches - ON as necessary

### **3.7 Loss of oil pressure**

- 1. Oil temperature - check

If oil temperature is rising:

- 2. THROTTLE - reduce power to minimum for flight
- 3. Land - as soon as possible

**CAUTION**

*Be prepared for engine failure and emergency landing.*

If oil temperature is normal:

- 2. Oil temperature - monitor
- 3. Oil pressure - monitor
- 4. Land - at nearest airfield

### **3.8 High oil pressure**

- 1. THROTTLE - reduce power to minimum for flight
- 2. Oil pressure - monitor
- 3. Land - as soon as possible

### 3.9 *Emergency landing without engine power*

Emergency landings are generally carried out in the case of engine failure and the engine cannot be re-started.

1. Airspeed - maintain *60 KIAS*
2. Emergency landing area - chose suitable area without obstacles
3. COMM - giving location and intentions - if possible
4. Ignition Switch - **OFF**
5. **FUEL** selector - **OFF**
6. Approach - without steep turns
7. Safety harness - fasten
8. Flaps - as necessary
9. **MASTER** - OFF - *before landing*

### 3.10 *Precautionary landing with engine power*

A precautionary landing is generally carried out in the cases where the pilot may be disorientated, the aircraft has no fuel reserve or possibly in bad weather conditions.

1. Choose landing area, determine wind direction.
2. Report your intention to land and landing area location.
3. Perform low-altitude passage into wind over the right-hand side of the chosen area with flaps extended as needed and thoroughly inspect the landing area.
4. Perform circle pattern.
5. Safety harness - fasten
6. Perform approach at increased idling with flaps in landing position (*30°*) at *60 KIAS*.
7. Reduce power to idle when flying over the runway threshold and touch-down at the very beginning of the chosen area.
8. After stopping the airplane:
  - Ignition Switch - **OFF**
  - All switches - **OFF**
  - FUEL** selector - **OFF**
  - Airplane - lock and seek assistance



**NOTE**

*Watch the chosen area steadily during precautionary landing.*

### 3.11 Engine fire during start

1. **FUEL** selector - **OFF**
2. **THROTTLE** - **MAX**
3. Ignition Switch - **OFF**
4. **MASTER** - OFF
5. Airplane - leave
6. Extinguish fire by yourself or call for a fire-brigade if you cannot do it.

### 3.12 Engine fire in flight

1. **FUEL** selector - **OFF**
2. **THROTTLE** - **MAX**
3. **CABIN HEATER** - **PUSH OFF**
4. Ignition Switch - **OFF** - after the fuel in carburetors is consumed and engine shut down
5. Airspeed - maintain *60 KIAS*
6. Emergency landing - perform according to 3.9 as soon as possible
7. Airplane - leave
8. Extinguish fire by yourself or call for a fire-brigade if you cannot do it.

**NOTE**

*Estimated time to pump fuel out of carburetors is about 30 sec.*

**WARNING**

*Do not attempt to re-start the engine!*

### 3.13 Electrical fire in flight

1. **MASTER** - OFF
2. Other switches - OFF
3. **CABIN HEATER** - **PUSH OFF**
4. Ventilation - open
5. Emergency landing - perform according to 3.9 as soon as possible

### 3.14 Emergency descent

1. Airspeed - max. permitted -  $V_{NE} = 138$  KIAS  
-  $V_{NO} = 108$  KIAS  
-  $V_A = 88$  KIAS
2. Engine RPM - do not overrun max. 5,800 rpm

### 3.15 Generator failure

- **LOW VOLT** red LED annunciator illuminates and
- Voltmeter indicates voltage under 12.5 V.

1. **MASTER** - ON
2. **PWR** circuit breaker - ON
3. Engine RPM - increase above 3,000 rpm

If the generator failure indication persists:

4. **PWR** circuit breaker - OFF – ON

If the generator failure indication persists:

5. **PWR** circuit breaker - OFF
6. All unnecessary electrical equipment - OFF
7. Voltmeter - monitor voltage of battery
8. Land as soon as possible at nearest suitable airport.

#### **CAUTION**

*Use transceiver, transponder and GPS as necessary, short time only.  
Operating time of battery in good condition is up to 30 minutes.  
The engine runs independently on generator functioning.*

### 3.16 Overvoltage

- Voltmeter permanently indicates voltage over 14.6 V.
1. Engine RPM - decrease to minimum usable for flight

If the overvoltage indication persists:

2. **PWR** circuit breaker - OFF
3. All unnecessary electrical equipment - OFF
4. Land as soon as possible at nearest suitable airport.

### 3.17 Inadvertent spin recovery

There is no uncontrollable tendency of the airplane to enter into a spin provided the normal piloting techniques are used.

Inadvertent spin recovery technique:

1. THROTTLE - **IDLE**
2. Flaps (if extended) - retract ( $0^\circ$ )
3. Ailerons control - neutral
4. Rudder control - full deflect opposite to the sense of rotation
5. Elevator control - push forward

After rotation stops:

6. Rudder control - neutral
7. Elevator control - pull gently to recover diving

**WARNING**

*Intentional spins are prohibited!*

### 3.18 Inadvertent icing encounter

**CAUTION**

*Aircraft is approved to operate in VMC condition only!*

1. Leave icing area - turn back or change altitude to reach area with higher outside air temperature.
2. **CARBURETOR AIR** - **PULL HOT**
3. **CABIN HEATER** - **PULL ON**
4. Increase RPM to minimize ice build-up on propeller blades.
5. Continue to move control surfaces to maintain their moveability.
6. In case of icing on the leading edge of wing, the stall speed will increase.
7. In case of icing on the pitot probe, erroneous indicating of the airspeed and altimeter.
8. If you fail to recover the engine power or normal flight conditions, land on the nearest airfield (*if possible*) or depending on the circumstances, perform a precautionary landing according to 3.10 or emergency landing according to 3.9.

**NOTE**

*The carburetor icing and air filter icing shows itself through a decrease engine power and an increase of engine temperatures.*

**NOTE**

*Use carburetor heating during lengthy descents and in areas of possible carburetor icing.*

### 3.19 Obstruction of air into engine filter

If the engine runs rough and power decrease, air filter can be clogged with some impurities e.g. dust or ice.

1. **CARBURETOR AIR** - **PULL HOT**
2. Check engine running and monitor engine instruments.
3. Land as soon as possible at nearest suitable airport.

**NOTE**

*When using the carburetor heating, engine power will decrease due to hot air suction from the heat exchanger.*

If you fail to recover the engine power, land on the nearest airfield (*if possible*) or depending on the circumstances, perform a precautionary landing according to 3.10.

### **3.20 Engine vibration**

If any forced aircraft vibrations appear, it is necessary:

1. To set engine speed to such power rating where the vibrations are lowest.
2. To land on the nearest airfield or to perform a precautionary landing according to 3.10.

### **3.21 Landing with a flat tire**

1. During landing keep the damaged wheel above ground as long as possible using the ailerons control.
2. Maintain the direction on the landing roll out, applying rudder control.

### **3.22 Landing with a defective landing gear**

1. If the main landing gear is damaged, perform touch-down at the lowest practicable speed and if possible, maintain direction during landing run.
2. If the nose wheel is damaged perform touch-down at the lowest practicable speed and hold the nose wheel above the ground by means of the elevator control as long as possible.

### **3.23 Loss of primary instruments**

#### **Flight instruments malfunction or failure**

1. GPS - Use for flight
2. Land as soon as practicable

#### **CAUTION**

*GPS show ground speed only – take the surface wind into account!*

### Engine instruments malfunction or failure

1. **ENG INST** switch - ON
2. **ENG INST** circuit breaker - ON
3. Land as soon as practicable

**CAUTION**

*Do not use maximum engine power without RPM indication!*

## 3.24 Loss of flight controls

### Lateral control failure

Use the Aileron Trim and Rudder for aircraft banking.

**CAUTION**

*Avoid steep turns – more than 15° of bank!  
Do not extend wing flaps!*

### Longitudinal control failure

Use the Elevator Trim and Throttle for aircraft longitudinal attitude change.

**CAUTION**

*Avoid abrupt maneuvers! Longer runway will be need for landing!  
Do not extend wing flaps!*

## 3.25 Power lever linkage cables failure

If power setting is not possible:

1. Ignition Switch - **OFF**
2. Airspeed - maintain 60 KIAS
3. Emergency landing - perform according to 3.9

### **3.26 Inadvertent canopy opening during takeoff**

- During takeoff – aircraft rotation occurs, the canopy opens approximately 50 mm.
- During climb and descent with airspeed at 60-75 KIAS, the canopy stays opened 50-80 mm.
- During horizontal flight with airspeed at 60-80 KIAS, the canopy stays opened 50-80 mm.
- In all above-mentioned cases – there are no flight problems, no vibrations, good aircraft control, and no change of flight characteristics.
- **It is not possible to close the canopy.**

#### ***Recommended procedure if the canopy opens during takeoff:***

1. **DO NOT TRY TO CLOSE THE CANOPY!**
2. Continue the takeoff
3. Climb to the safe altitude
  - maintain airspeed at 62 KIAS
4. Continue to fly the normal traffic pattern (circuit)
  - max. airspeed 75 KIAS
5. Land
  - after stopping, close and lock the canopy

***Recommendation:*** - ***Before takeoff, manually check the canopy is locked by pushing on the canopy upwards.***

#### **CAUTION**

***During the flight, approach and landing - do not perform any slipping.***

### 3.27 BRS activation

#### **WARNING**

*The BRS system is intended to be used only in an extreme emergency in which recovery of the occupants of the airplane using other EMERGENCY PROCEDURES is not possible. If the airplane is controllable and structurally capable of flying to a safe landing site, the BRS system SHOULD NOT BE ACTIVATED. If the airplane is uncontrollable and/or a forced landing on extreme inhospitable terrain cannot be avoided, the BRS system SHOULD BE ACTIVATED.*

#### **WARNING**

*Emergency parachute approved for up to MTOW 612kg and max. velocity 120 knots!*

#### **CAUTION**

*The extreme emergency in which the BRS system must be activated requires that it be activated in a timely manner. Do not wait until the airplane has exceeded the airspeed and load factor operating envelope, is at an altitude which does not allow the parachute to fully deploy prior to ground impact, or is in an extreme attitude. BRS systems are not intended to be a substitute for good pilot judgment, skills and training, proper preflight planning, proper aircraft maintenance and preflight inspections, and safe aircraft operations.*

- |                                       |   |                         |
|---------------------------------------|---|-------------------------|
| 1. Ignition Switch                    | - | <b>OFF</b>              |
| 2. <b>FUEL</b> selector               | - | <b>OFF</b>              |
| 3. <b>MASTER</b>                      | - | <b>OFF</b>              |
| 4. Activating handle                  | - | pull, hard continuously |
| 5. Safety harness                     | - | fasten                  |
| 6. Emergency landing<br>body position | - | assume                  |

#### **NOTE**

*The recommended emergency landing body position should be assumed by all occupants. Both hands should be placed behind the head with the fingers locked together. The elbows should be pulled forward to protect the side of the head and face. The upper torso should be erect.*

#### **NOTE**

*The force required to activate the rocket motor is approximately 135 N; total travel of the activating handle is approximately 50 mm.*



# **SECTION 4**

## **TABLE OF CONTENTS**

### **4. NORMAL PROCEDURES**

<b>4.1 Preflight check</b>	<b>4-2</b>
<b>4.2 Engine starting</b>	<b>4-5</b>
<b>4.3 Taxiing</b>	<b>4-6</b>
<b>4.4 Normal takeoff</b>	<b>4-7</b>
<b>4.5 Climb</b>	<b>4-9</b>
<b>4.6 Best angle of climb speed (<math>V_x</math>)</b>	<b>4-9</b>
<b>4.7 Best rate of climb speed (<math>V_y</math>)</b>	<b>4-9</b>
<b>4.8 Cruise</b>	<b>4-9</b>
<b>4.9 Descend</b>	<b>4-9</b>
<b>4.10 Approach</b>	<b>4-10</b>
<b>4.11 Normal landing</b>	<b>4-10</b>
<b>4.12 Short field takeoff and landing procedures</b>	<b>4-11</b>
<b>4.13 Balked landing procedures</b>	<b>4-11</b>
<b>4.14 Airplane parking and tie-down</b>	<b>4-12</b>

## 4. NORMAL PROCEDURES

This section provides checklists and recommended procedures for normal operation of the aircraft.

### CAUTION

Airspeeds values are valid for standard **AVIATIK WA037383 pitot-static probe**.  
These normal procedures are valid for **WOODCOMP KLASSIC 170/3/R** three composite blades ground adjustable propeller.


### 4.1 Preflight check

Carry out the pre-flight inspection every day prior to the first flight or after airplane assembly. Incomplete or careless inspection can cause an accident. Carry out the inspection following the instructions in the Inspection Check List.

### NOTE

The word "condition" in the instructions means a visual inspection of surface for damage deformations, scratching, chafing, corrosion or other damages, which may lead to flight safety degradation.

The manufacturer recommends carrying out the pre-flight inspection as follows:

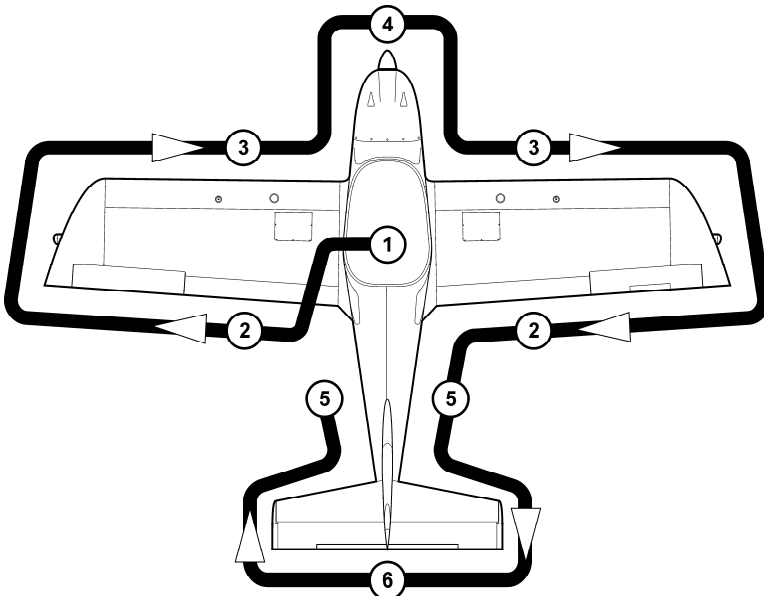

## Inspection Check List

①	<ul style="list-style-type: none"> <li>• Canopy - condition of attachment, cleanness</li> <li>• Check cockpit for loose objects</li> <li style="padding-left: 20px;"><i>Switches:</i></li> <li>• Ignition - <b>OFF</b></li> <li>• <b>MASTER</b> - ON</li> <li>• <b>ENG INST</b> - ON, check Battery voltage, - Engine instruments functioning, - Fuel quantity indication</li> <li>• <b>AVIONICS</b> - ON, check Transponder, Transceiver, Intercom and GPS functioning</li> <li>• <b>FLIGHT INST</b> - ON, check Electric attitude indicator, Electric directional gyro and Electric turn coordinator functioning</li> <li>• <b>FUEL P</b> - ON, check functioning</li> <li>• <b>STROBE, NAV L, LDG L</b> - ON, check functioning</li> <li>• Flight controls - visual inspection, function, clearance, free movement up to stops, check wing flaps and trims operation</li> <li>• All switches - OFF</li> <li>• <b>MASTER</b> - OFF</li> <li>• BRS system - check condition of attachment and activating handle with safety pin, airframe bridles integrity and routing, service dates for expiration</li> </ul>
②	<ul style="list-style-type: none"> <li>• Wing flap - surface condition, attachment, clearance</li> <li>• Aileron - surface condition, attachment, clearance, free movement, trim tab surface condition (<i>Right aileron only</i>), attachment</li> <li>• Wing tip - surface condition, strobe/nav. light attachment</li> </ul>
③	<ul style="list-style-type: none"> <li>• Wing upper surface - condition, cleanness</li> <li>• Leading edge - surface condition, cleanness</li> <li>• Wing locker - closed and locked</li> <li>• Pitot head - condition, attachment, cleanness - <i>Left wing only</i></li> </ul>

<p>④</p>	<ul style="list-style-type: none"> <li>• Nose gear - wheel, fairing and leg attachment, condition, pressure of tire</li> <li>• Engine cowling - condition</li> <li>• Propeller and spinner - condition</li> <li>• Engine mount and exhaust manifold - condition, attachment</li> <li>• Oil quantity - check (Before this check, ensure Ignition switch and <b>MASTER - OFF</b>, open the oil tank and then turn the propeller by hand in direction of engine rotation several times to pump oil from the engine into the oil tank – this process is finished when air is returning back to the oil tank and can be noticed by a murmur from the open oil tank – see the Rotax Operator's manual.) <ul style="list-style-type: none"> <li>- check oil level and replenish as required</li> <li>- close the oil tank</li> </ul> </li> <li>• Coolant quantity - check</li> <li>• Fuel and electrical system - visual inspection</li> <li>• Fuel system - draining</li> <li>• Other actions according to the engine manual</li> </ul>
<p>⑤</p>	<ul style="list-style-type: none"> <li>• Main landing gear - wheel, fairing, leg and brake attachment, condition, pressure of tire</li> <li>• Fuselage surface - condition, cleanness</li> <li>• Antennas - attachment</li> </ul>
<p>⑥</p>	<ul style="list-style-type: none"> <li>• Vertical tail unit - condition of surface, attachment, free movement, rudder stops</li> <li>• Horizontal tail unit - condition of surface, attachment, free movement, elevator stop - trim tab surface condition, attachment</li> </ul>

**CAUTION**  
*Perform Weight and Balance check before flight.*

**WARNING**

*Physically check the fuel level before each takeoff to make sure you have sufficient fuel for the planned flight.*

**WARNING**

*In case of long-term parking it is recommended to turn the engine several times (Ignition Switch - OFF!) by turning the propeller. Always handle by palm the blade area i.e. do not grasp only the blade edge. It will facilitate engine starting.*

## 4.2 Engine starting

### 4.2.1 Before engine starting

1. Flight controls - free & correct movement
2. Canopy - clean, close and lock
3. Safety harness - fasten
4. Brakes - fully applied
5. **PARKING BRAKE** - use
6. BRS activating handle - remove safety pin

### 4.2.2 Engine starting

1. THROTTLE - **IDLE**
2. **CHOKE** - cold engine - **ON** (*fully pulled and hold*)  
- warm engine - **OFF**
3. **FUEL** selector - **LEFT** or **RIGHT** (*in accordance with fuel tanks filling*); check correct position - green mark (see Chapter 7.11)
4. **MASTER** - ON
5. **ENG INST** - ON
6. **FUEL P** - ON
7. Propeller area - clear
8. Ignition Switch - hold **START**  
after engine is starting - **BOTH**

After engine is running:

9. **AVIONICS** - ON
10. **FUEL P** - OFF
11. Other switches - ON as necessary
12. **CHOKE** - gradually release during engine warming up
13. THROTTLE - maintain max. 2,500 rpm for warming up

**CAUTION**

- *The starter should be activated for a maximum of 10 sec, followed by 2 min pause for starter cooling.*
- *As soon as engine runs, adjust throttle to achieve smooth running at approx. 2,500 rpm.*
- *Check if oil pressure has risen within 10 sec. and monitor oil pressure. Increase of engine speed is only permitted at steady oil pressure readings above 2 bar.*
- *At an engine start with low oil temperature, continue to observe the oil pressure as it could drop again due to the increased flow resistance in the suction line. The number of revolutions may be only so far increased that the oil pressure remains steady.*
- *To prevent impact load, start the engine with throttle lever in idle position or at the most up to 10 % open.*

**4.2.3 Engine warm up**

Prior to engine check block the main wheels using chocks. Initially warm up the engine to 2,000 rpm for approximately 2 min, then continue to 2,500 rpm till oil temperature reaches 50 °C. The warm up period depends on ambient air temperature. Check temperatures and pressures.

**4.3 Taxiing**

1. Flaps - retracted (0°)
2. **PARKING BRAKE** - release
3. Brakes - function check at taxiing start

Apply power and brakes as needed. Apply brakes to control movement on ground. Taxi carefully when wind velocity exceeds 20 knots. Hold the control stick in neutral position.

**NOTE**

*During the airplane waiting maintain the engine speed within the range from 2,000 to 2,200 rpm.*

## 4.4 Normal Takeoff

### 4.4.1 Engine run-up

#### CAUTION

*The engine run-up should be performed with the aircraft heading upwind and not on a loose terrain (the propeller may suck grit which can damage the leading edges of blades).*

- |                        |   |
|------------------------|---|
| 1. Brakes              | - fully applied                           |
| 2. Throttle            | - <b>MAX</b>                              |
| 3. Engine speed        | - check (5,000 $\pm$ 100 rpm – wind calm) |
| 4. Engine gauges       | - within limits                           |
| 5. Throttle            | - <b>IDLE</b>                             |
| 6. Engine acceleration | - check                                   |

#### CAUTION

*To prevent impact load, wait for around 3 sec. after throttling back to partial load to reach constant speed before re-acceleration.*

- |                          |  |
|--------------------------|--|
| 7. Ignition check        | - set engine speed to 4,000 rpm<br>- switch ignition gradually to<br><b>L – BOTH – R – BOTH</b><br>(Max. engine speed drop with only one ignition circuit must not exceed <b>300 rpm</b> .<br>Max. engine speed drop difference between circuits <b>L</b> and <b>R</b> should be <b>115 rpm</b> .) |
| 8. <b>CARBURETOR AIR</b> | - <b>PULL HOT</b><br>- check carburetor preheating function<br>(Engine speed drop approximately 50 rpm.)<br>- push OFF   |
| 9. Throttle              | - <b>IDLE</b>  |

#### NOTE

*For checking the two ignition circuits, only one circuit may be switched OFF and ON at a time.*

#### 4.4.2 Before takeoff

**NOTE**

*Aileron trim tab position can be checked visually from cockpit by view to the right.*

1. Altimeter - set
2. Trims - set neutral position
3. Flight controls - check free movement
4. Cockpit canopy - closed and locked

**Recommendation:** - **Before takeoff, manually check the canopy is locked by pushing the canopy upwards.**

5. Safety harness - fastened
6. **FUEL** selector - **LEFT** or **RIGHT**; check correct position - green mark (see Chapter 7.11)
7. Ignition switch - **BOTH**
8. Flaps - takeoff position (12°)

#### 4.4.3 Takeoff

1. THROTTLE - **MAX**
2. Engine speed - check (5,000 ±100 rpm – wind calm)
3. Engine gauges - within limits
4. Elevator control - neutral position  
- at 30 - 34 KIAS pull slightly to lift the nose wheel
5. Airplane unstick - at 40 - 44 KIAS
6. Climb - after reaching airspeed 62 KIAS
7. Brakes - apply
8. Flaps - retract (0°) at safe altitude  
(max. airspeed for flaps using is 75 KIAS)
9. Trims - as necessary



**WARNING**

Takeoff is prohibited if:

- Engine is running unsteadily, roughly or with vibrations
- Engine instrument values are beyond operational limits
- Aircraft systems (e.g. brakes, controls or avionics) working incorrectly
- Crosswind velocity exceeds permitted limits  
(see Section 5 Performance, 5.7 Demonstrated wind performance)

## 4.5 Climb

1. THROTTLE - **MAX**  
(max. 5,800 rpm for max. 5 min,  
max. continuous power 5,500 rpm)
2. Airspeed -  $V_x = 55$  KIAS  
-  $V_y = 62$  KIAS
3. Trims - as necessary
4. Engine gauges - within limits

**CAUTION**

*If the cylinder head temperature or oil temperature and/or coolant temperature approaches or exceeds limits, reduce the climb angle to increase airspeed and possibly return within limits. If readings do not improve, troubleshoot causes other than high power setting at low airspeed.*

**4.6 Best angle of climb speed ( $V_x$ ):** 55 KIAS

**4.7 Best rate of climb speed ( $V_y$ ):** 62 KIAS

## 4.8 Cruise

Refer to Section 5, for recommended cruising figures.

## 4.9 Descend

1. Optimum glide speed - 60 KIAS

## 4.10 Approach

1. Approach speed - 60 KIAS
2. THROTTLE - as necessary
3. Flaps - takeoff position (12°)
4. Trims - as necessary
5. Safety harness - fasten

### **CAUTION**

*It is not advisable to reduce the engine throttle control lever to minimum on final approach and when descending from very high altitude. In such cases the engine becomes under-cooled and a loss of power may occur. Descent at increased idle (approximately 3,000 rpm), airspeed 60-75 KIAS and check that the engine instruments indicate values within permitted limits.*

## 4.11 Normal landing

### 4.11.1 Before landing

1. THROTTLE - as necessary
2. Airspeed - 60 KIAS
3. Flaps - landing position (30°)
4. Trims - as necessary

### 4.11.2 Landing

1. THROTTLE - **IDLE**
2. Touch-down on main wheels
3. Apply brakes - as necessary  
(after the nose wheel touch-down)

### 4.11.3 After landing

1. Flaps - retract (0°)
2. THROTTLE - engine RPM set as required for taxiing
3. Trims - set neutral position

#### 4.11.4 Engine shut down

1. THROTTLE - **IDLE**
2. Engine gauges - within limits
3. Ignition Switch - **OFF**
4. Switches - OFF
5. **MASTER** - OFF
6. **FUEL** selector - **OFF**
7. BRS activating handle - install safety pin

#### **CAUTION**

*Rapid engine cooling should be avoided during operation. This happens above all during aircraft descent, taxiing and low engine rpm or at engine shutdown immediately after landing.*

*Under normal conditions the engine temperatures stabilize during descent, taxiing and at values suitable to stop engine by switching the ignition off. If necessary, cool the engine at engine speed within the range 2,000 to 2,200 rpm to stabilize the temperatures prior to engine shut down.*

#### 4.12 Short field takeoff and landing procedures

None

#### 4.13 Balked landing procedures

1. THROTTLE - **MAX**  
(max. 5,800 rpm for max. 5 min,  
max. continuous power 5,500 rpm)
2. Airspeed - min. 60 KIAS
3. Flaps - takeoff position (12°)  
(max. airspeed for flaps using is 75 KIAS)
4. Trims - as necessary
5. Climb - after reaching 62 KIAS
6. Flaps - retract (0°) at safe altitude  
(max. airspeed for flaps using is 75 KIAS)
7. Trims - as necessary

#### 4.14 Aircraft parking and tie-down

1. Ignition Switch - **OFF**
2. **MASTER** - OFF
3. **FUEL** selector - **OFF**
4. Parking brake - as necessary
5. BRS activating handle - installed safety pin
6. GPS - check screens switching off
7. Canopy - close, lock as necessary
8. Secure the airplane

**NOTE**

*It is recommended to use parking brake for short-time parking only, between flights during a flight day. After ending the flight day or at low temperatures of ambient air, do not use parking brake, but use the wheel chocks instead.*

**NOTE**

*Use anchor eyes on the wings and fuselage rear section to fix the airplane. Move control stick forward and fix it together with the rudder pedals. Make sure that the cockpit canopy is properly closed and locked.*

# **SECTION 5**

## **TABLE OF CONTENTS**

### **5. PERFORMANCE**

<b>5.1</b>	<b>Takeoff distances</b>	<b>5-3</b>
<b>5.2</b>	<b>Landing distances</b>	<b>5-3</b>
<b>5.3</b>	<b>Rate of climb</b>	<b>5-3</b>
<b>5.4</b>	<b>Cruise speeds</b>	<b>5-4</b>
<b>5.5</b>	<b>RPM setting and fuel consumption</b>	<b>5-5</b>
<b>5.6</b>	<b>Airspeed indicator system calibration</b>	<b>5-10</b>
<b>5.7</b>	<b>Demonstrated wind performance</b>	<b>5-11</b>

## 5. PERFORMANCE

The presented data has been computed from actual flight tests with the aircraft and engine in good conditions and using average piloting techniques.

If not stated otherwise, the performance stated in this section is valid for maximum takeoff weight *600 kg* and under ISA conditions.

The performance shown in this section is valid for aircraft equipped with **ROTAX 912 ULS** engine with maximum power *73.5 kW* and **WOODCOMP KLASSIC 170/3/R** three composite blades ground adjustable propeller with pitch setting *17.5°*.

### **CAUTION**

*Airspeed values are valid for standard AVIATIK WA037383 pitot-static probe.*

## 5.1 Takeoff distances

- Conditions:** - Altitude: 0 ft ISA  
 - Engine power: max. takeoff  
 - Flaps: 12°

RUNWAY SURFACE	Takeoff run distance		Takeoff distance over 50 ft (15 m) obstacle	
	ft	m	ft	m
CONCRETE	463	141	1,270	387
GRASS	702	214	1,499	457

## 5.2 Landing distances

- Conditions:** - Altitude: 0 ft ISA  
 - Engine power: *dle*  
 - Flaps: 30°  
 - Brakes fully depressed immediately after touch-down

RUNWAY SURFACE	Landing distance over 50 ft (15 m) obstacle		Landing run distance (braked)	
	ft	m	ft	m
CONCRETE	1,188	362	479	146
GRASS	1,109	338	364	111

## 5.3 Rate of climb

<b>Conditions:</b> Engine: max. takeoff Flaps: 0°		Best rate of climb speed <i>V<sub>y</sub></i>	Rate of climb <i>V<sub>z</sub></i>
Altitude			
		<i>KIAS</i>	<i>fpm</i>
	0 ft	62	825
	1,000 ft	62	783
	3,000 ft	62	685
	5,000 ft	62	576
	7,000 ft	62	472
	9,000 ft	62	355

## 5.4 Cruise speeds

Altitude	Engine speed	Airspeeds			MAP	Fuel consumption
		ft	rpm	KIAS		
<b>1,000</b>	4,200	72	72	73	23.7	13.6
	4,500	81	80	81	24.6	15.7
	4,800	91	89	89	25.5	18.0
	5,000	96	94	95	26.1	19.5
	5,300	105	102	103	27.0	21.9
	5,500	112	108	109	27.7	23.7
	5,700	118	113	114	28.3	25.8
<b>3,000</b>	4,200	68	69	72	22.2	13.2
	4,500	78	77	80	23.0	15.3
	4,800	86	85	88	23.8	17.5
	5,000	93	91	94	24.3	19.0
	5,300	102	99	102	25.1	21.4
	5,500	108	104	108	25.5	23.3
<b>5,000</b>	4,200	65	66	71	20.5	12.9
	4,500	74	74	79	21.3	14.9
	4,800	83	82	87	22.1	17.2
	5,000	89	87	93	22.7	18.7
	5,300	97	95	101	23.5	21.1
	5,500	103	100	107	24.1	22.8
<b>7,000</b>	4,200	62	63	69	19.3	12.5
	4,500	69	70	77	20.0	14.6
	4,800	79	78	85	20.6	16.8
	5,000	84	83	91	21.2	18.4
	5,300	92	90	99	22.0	20.8
	5,500	98	95	105	22.5	22.3
<b>9,000</b>	4,200	57	59	67	18.4	12.2
	4,500	64	65	74	19.0	14.3
	4,800	73	73	83	19.6	16.4
	5,000	79	78	89	20.0	18.0
	5,300	86	85	97	20.5	20.4
	5,500	92	90	103	20.8	21.8



## 5.5 RPM setting and fuel consumption

Altitude	ft	1,000					
Engine speed	<i>rpm</i>	<b>4,200</b>	<b>4,500</b>	<b>4,800</b>	<b>5,000</b>	<b>5,300</b>	<b>5,500</b>
Fuel consumption	<i>L/h</i>	13.6	15.7	18.0	19.5	21.9	23.7
Airspeeds	<i>KIAS</i>	72	81	91	96	105	112
	<i>KCAS</i>	72	80	89	94	102	108
	<i>KTAS</i>	73	81	89	95	103	109
<b>Endurance and Range at 113 liters</b>							
Endurance	<i>hh:mm</i>	8:18	7:11	6:16	5:47	5:09	4:46
Range	<i>NM</i>	607	583	559	551	531	520
	<i>km</i>	1123	1080	1035	1020	984	962
<b>Endurance and Range at 90 liters</b>							
Endurance	<i>hh:mm</i>	6:37	5:43	5:00	4:36	4:06	3:47
Range	<i>NM</i>	483	464	445	438	423	414
	<i>km</i>	895	860	824	812	784	767
<b>Endurance and Range at 60 liters</b>							
Endurance	<i>hh:mm</i>	4:24	3:49	3:20	3:04	2:44	2:31
Range	<i>NM</i>	322	310	297	292	282	276
	<i>km</i>	596	573	549	541	523	511
<b>Endurance and Range at 30 liters</b>							
Endurance	<i>hh:mm</i>	2:12	1:54	1:40	1:32	1:22	1:15
Range	<i>NM</i>	161	155	148	146	141	138
	<i>km</i>	298	287	275	271	261	256
<b>Endurance and Range at 15 liters</b>							
Endurance	<i>hh:mm</i>	1:06	0:57	0:50	0:46	0:41	0:37
Range	<i>NM</i>	81	77	74	73	71	69
	<i>km</i>	149	143	137	135	131	128

Altitude	ft	3,000					
Engine speed	<i>rpm</i>	<b>4,200</b>	<b>4,500</b>	<b>4,800</b>	<b>5,000</b>	<b>5,300</b>	<b>5,500</b>
Fuel consumption	<i>L/h</i>	13.2	15.3	17.5	19.0	21.4	23.3
Airspeeds	<i>KIAS</i>	68	78	86	93	102	108
	<i>KCAS</i>	69	77	85	91	99	104
	<i>KTAS</i>	72	80	88	94	102	108
<b>Endurance and Range at 113 liters</b>							
Endurance	<i>hh:mm</i>	8:33	7:23	6:27	5:56	5:16	4:50
Range	<i>NM</i>	616	591	568	559	539	524
	<i>km</i>	1142	1094	1052	1035	997	970
<b>Endurance and Range at 90 liters</b>							
Endurance	<i>hh:mm</i>	6:49	5:52	5:08	4:44	4:12	3:51
Range	<i>NM</i>	491	471	453	445	429	417
	<i>km</i>	909	872	838	825	794	773
<b>Endurance and Range at 60 liters</b>							
Endurance	<i>hh:mm</i>	4:32	3:55	3:25	3:09	2:48	2:34
Range	<i>NM</i>	327	314	302	297	286	278
	<i>km</i>	606	581	559	550	530	515
<b>Endurance and Range at 30 liters</b>							
Endurance	<i>hh:mm</i>	2:16	1:57	1:42	1:34	1:24	1:17
Range	<i>NM</i>	164	157	151	148	143	139
	<i>km</i>	303	291	279	275	265	258
<b>Endurance and Range at 15 liters</b>							
Endurance	<i>hh:mm</i>	1:08	0:58	0:51	0:47	0:42	0:38
Range	<i>NM</i>	82	78	75	74	71	70
	<i>km</i>	152	145	140	137	132	129

Altitude	ft	5,000					
Engine speed	<i>rpm</i>	<b>4,200</b>	<b>4,500</b>	<b>4,800</b>	<b>5,000</b>	<b>5,300</b>	<b>5,500</b>
Fuel consumption	<i>L/h</i>	12.9	14.9	17.2	18.7	21.1	22.8
Airspeeds	<i>KIAS</i>	65	74	83	89	97	103
	<i>KCAS</i>	66	74	82	87	95	100
	<i>KTAS</i>	71	79	87	93	101	107
<b>Endurance and Range at 113 liters</b>							
Endurance	<i>hh:mm</i>	8:45	7:35	6:34	6:02	5:21	4:57
Range	<i>NM</i>	622	599	572	562	541	530
	<i>km</i>	1152	1110	1059	1041	1002	982
<b>Endurance and Range at 90 liters</b>							
Endurance	<i>hh:mm</i>	6:58	6:02	5:13	4:48	4:15	3:56
Range	<i>NM</i>	495	477	455	448	431	422
	<i>km</i>	917	884	843	829	798	782
<b>Endurance and Range at 60 liters</b>							
Endurance	<i>hh:mm</i>	4:39	4:01	3:29	3:12	2:50	2:37
Range	<i>NM</i>	330	318	303	298	287	282
	<i>km</i>	612	589	562	553	532	521
<b>Endurance and Range at 30 liters</b>							
Endurance	<i>hh:mm</i>	2:19	2:00	1:44	1:36	1:25	1:18
Range	<i>NM</i>	165	159	152	149	144	141
	<i>km</i>	306	295	281	276	266	261
<b>Endurance and Range at 15 liters</b>							
Endurance	<i>hh:mm</i>	1:09	1:00	0:52	0:48	0:42	0:39
Range	<i>NM</i>	83	80	76	75	72	70
	<i>km</i>	153	147	141	138	133	130

Altitude	ft	<b>7,000</b>					
Engine speed	<i>rpm</i>	<b>4,200</b>	<b>4,500</b>	<b>4,800</b>	<b>5,000</b>	<b>5,300</b>	<b>5,500</b>
Fuel consumption	<i>L/h</i>	12.5	14.6	16.8	18.4	20.8	22.3
Airspeeds	<i>KIAS</i>	62	69	79	84	92	98
	<i>KCAS</i>	63	70	78	83	90	95
	<i>KTAS</i>	69	77	85	91	99	105
<b>Endurance and Range at 113 liters</b>							
Endurance	<i>hh:mm</i>	9:02	7:44	6:43	6:08	5:25	5:04
Range	<i>NM</i>	624	596	572	559	538	532
	<i>km</i>	1155	1104	1059	1035	996	985
<b>Endurance and Range at 90 liters</b>							
Endurance	<i>hh:mm</i>	7:12	6:09	5:21	4:53	4:19	4:02
Range	<i>NM</i>	497	475	455	445	428	424
	<i>km</i>	920	879	843	824	793	785
<b>Endurance and Range at 60 liters</b>							
Endurance	<i>hh:mm</i>	4:48	4:06	3:34	3:15	2:53	2:41
Range	<i>NM</i>	331	316	304	297	286	283
	<i>km</i>	613	586	562	550	529	523
<b>Endurance and Range at 30 liters</b>							
Endurance	<i>hh:mm</i>	2:24	2:03	1:47	1:37	1:26	1:20
Range	<i>NM</i>	166	158	152	148	143	141
	<i>km</i>	307	293	281	275	264	262
<b>Endurance and Range at 15 liters</b>							
Endurance	<i>hh:mm</i>	1:12	1:01	0:53	0:48	0:43	0:40
Range	<i>NM</i>	83	79	76	74	71	71
	<i>km</i>	153	147	141	137	132	131

Altitude	ft	9,000					
Engine speed	<i>rpm</i>	<b>4,200</b>	<b>4,500</b>	<b>4,800</b>	<b>5,000</b>	<b>5,300</b>	<b>5,500</b>
Fuel consumption	<i>L/h</i>	12.2	14.3	16.4	18.0	20.4	21.8
Airspeeds	<i>KIAS</i>	57	64	73	79	86	92
	<i>KCAS</i>	59	65	73	78	85	90
	<i>KTAS</i>	67	74	83	89	97	103
<b>Endurance and Range at 113 liters</b>							
Endurance	<i>hh:mm</i>	9:15	7:54	6:53	6:16	5:32	5:11
Range	<i>NM</i>	621	585	572	559	537	534
	<i>km</i>	1149	1083	1059	1035	995	989
<b>Endurance and Range at 90 liters</b>							
Endurance	<i>hh:mm</i>	7:22	6:17	5:29	5:00	4:24	4:07
Range	<i>NM</i>	494	466	455	445	428	425
	<i>km</i>	915	863	844	824	793	788
<b>Endurance and Range at 60 liters</b>							
Endurance	<i>hh:mm</i>	4:55	4:11	3:39	3:20	2:56	2:45
Range	<i>NM</i>	330	310	304	297	285	283
	<i>km</i>	610	575	562	549	528	525
<b>Endurance and Range at 30 liters</b>							
Endurance	<i>hh:mm</i>	2:27	2:05	1:49	1:40	1:28	1:22
Range	<i>NM</i>	165	155	152	148	143	142
	<i>km</i>	305	288	281	275	264	263
<b>Endurance and Range at 15 liters</b>							
Endurance	<i>hh:mm</i>	1:13	1:02	0:54	0:50	0:44	0:41
Range	<i>NM</i>	82	78	76	74	71	71
	<i>km</i>	153	144	141	137	132	131

## 5.6 *Airspeed indicator system calibration*


KIAS	KCAS
30	35
35	39
40	44
45	48
50	53
55	57
60	62
65	66
70	71
75	75
80	79
85	84
90	88
95	93
100	97
105	102
110	106
115	111
120	115
125	120
130	124
135	129
140	133

### 5.7 Demonstrated wind performance

Max. demonstrated headwind velocity for take-off and landing: ..... 24 knots

Max. demonstrated crosswind velocity for take-off and landing: .... 12 knots

#### Wind components figure

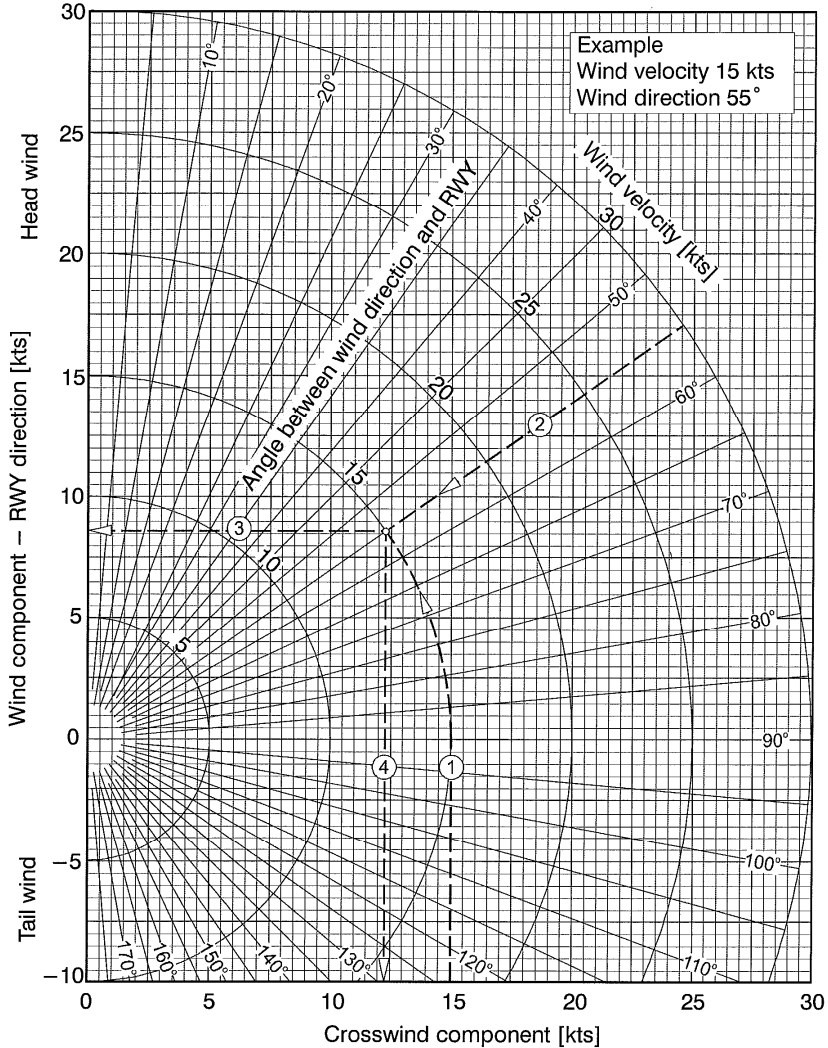

**Example:** 1. Wind velocity ..... 15 knots      3. Headwind component ..... 8.6 knots  
 2. Wind direction ..... 55°                      4. Crosswind component ..... 12.3 knots

*Intentionally left blank*



# **SECTION 6**

## **TABLE OF CONTENTS**

### **6. WEIGHT AND BALANCE**

<b>6.1</b>	<b>Introduction</b>	<b>6-2</b>
<b>6.2</b>	<b>Airplane weighing procedure</b>	<b>6-2</b>
<b>6.3</b>	<b>Operating weights and loading</b>	<b>6-3</b>
<b>6.4</b>	<b>Weight and balance C.G. layout</b>	<b>6-4</b>
<b>6.5</b>	<b>C.G. range and determination</b>	<b>6-4</b>
<b>6.6</b>	<b>Loading and C.G. check</b>	<b>6-7</b>
<b>6.7</b>	<b>Fuel weight – quantity conversion chart</b>	<b>6-11</b>
<b>6.8</b>	<b>C.G. change in dependence of fuel quantity</b>	<b>6-11</b>
<b>6.9</b>	<b>Load sheet and Balance chart</b>	<b>6-12</b>
<b>6.10</b>	<b>Installed equipment list</b>	<b>6-15</b>

## 6. WEIGHT AND BALANCE

### 6.1 Introduction

This section contains weight and balance records and the payload range for safe operation of *PiperSport* aircraft.

Procedures for weighing the aircraft and the calculation method for establishing the permitted payload range are contained in FAA Aviation Advisory Circular AC.43.13 – 1B.

### 6.2 Airplane weighing procedure

#### 1. Preparation

- remove all impurities from the aircraft as well as further undesirable objects
- inflate tires to recommended operating pressure
- drain fuel from fuel installation
- add oil, hydraulic and cooling liquid up to the maximum specified value
- retract wing flaps, close the canopy and other lids and covers, remove control surfaces blocking
- level the airplane according to the rivet line located on the fuselage (on LH and RH sides) under the canopy frame

#### 2. Leveling

- Place scales under each wheel
- Deflate the nose tire and/or lower or raise the nose strut to properly center the bubble in the level.

#### 3. Weighing

- With the airplane level and brakes released, record the weight shown on each scale. Deduct the tare, if any, from each reading.

#### 4. Measuring

- The DATUM (reference plane) for arms measuring is on the wing leading edge Rib No.4.
- Obtain measurement LR and LL by measuring horizontally (along the airplane center line) from a line stretched between datum on the left and right wing.

- Obtain measurement LN by measuring horizontally and parallel to the airplane center line, from center of nose wheel axle left sides, to the datum on the left wing. Repeat on right side and average the measurements.
- 5. Using weights from item 3 and measurements from item 4 the airplane weight and C.G. can be determined.
- 6. Basic Empty Weight may be determined by completing appropriate table.

### 6.3 Operating weights and loading

**Weights:**

Max. takeoff weight.....	600 kg
Max landing weight.....	600 kg
Max. weight of fuel.....	82 kg
Max. baggage weight in rear fuselage.....	18 kg
Max. baggage weight in each wing locker.....	20 kg
Maximum empty weight.....	405 kg

**Crew:**

Number of seats.....	2
Minimum crew ( <i>only on the left seat</i> ).....	1 pilot
Minimum crew weight.....	55 kg
Maximum crew weight on each seat.....	115 kg

**Arms:**

Pilot/Passenger.....	700 mm
Baggage compartment.....	1,310 mm
Wing lockers.....	600 mm
Fuel tanks.....	180 mm


**NOTE**

*Actual Empty weight is shown in Section 9, Supplement No. 02.*

**NOTE**

*For the needs of this Handbook the fuel specific weight of 0.72 kg / L was used to convert volume units into weight units.*

## 6.4 Weight and balance C.G. layout

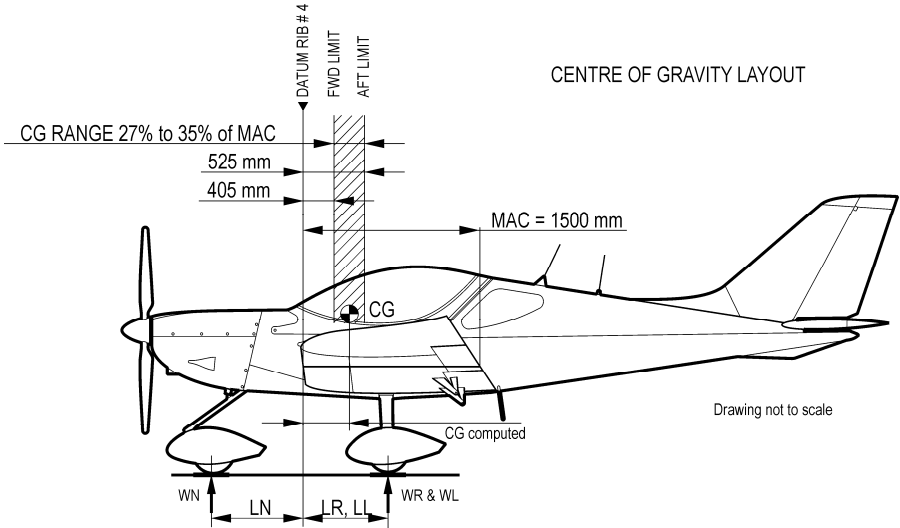

## 6.5 C.G. range and determination

### 6.5.1 Aircraft C.G. range:

Empty weight C.G. range .....	28 to 29.5 % of MAC
	420 to 442.5 mm of MAC
Operating C.G. range .....	27 to 35 % of MAC
	405 to 525 mm of MAC

### 6.5.2 Aircraft C.G. determination

After any changes in equipment or if the aircraft weight is affected by any alternation or repair, a new weighing and C.G. determination perform as follows:

#### Aircraft empty weight C.G. determination

1. Aircraft weighing according to 6.2.
2. Record weight and arm values to the aircraft empty weight C.G. table, nose wheel arm is negative (-).
3. Calculate and record moment for each of the main and nose wheels using the following formula:

$$MOMENT (kg\ mm) = WEIGHT (kg) \times ARM (mm)$$

Nose wheel moment is negative (-).

4. Calculate and record total weight and moment.
5. Determine and record empty weight C.G. using the following formula:

$$AIRCRAFT\ EMPTY\ WEIGHT\ C.G. = \frac{M_{TE}}{W_{TE}} (mm) \times \frac{100}{MAC} (\%) \text{ of } MAC$$

#### Aircraft empty weight C.G. determination table

AIRCRAFT EMPTY C.G.	ITEM	WEIGHT kg	ARM mm	MOMENT kg mm
	RIGHT MAIN WHEEL	$W_R =$	$L_R =$	
	LEFT MAIN WHEEL	$W_L =$	$L_L =$	
	NOSE WHEEL	$W_N =$	$L_N = -$ negative arm	-
	TOTAL	Empty weight: $W_{TE} =$	C.G. = mm % MAC	Aircraft moment: $M_{TE} =$

**NOTE:** Empty weight is including oil, coolant, hydraulic fluid and unusable fuel.

**NOTE**

Actual Weight and Balance record this aircraft is shown in Section 9,  
Supplement No. 02.

**Blank form of Weight & Balance record**

**WEIGHT & BALANCE RECORD**

**Empty weight C.G. determination table**

AIRCRAFT EMPTY C.G.	ITEM	WEIGHT kg	ARM mm	MOMENT kg mm
	RIGHT MAIN WHEEL	$W_R =$	$L_R =$	
	LEFT MAIN WHEEL	$W_L =$	$L_L =$	
	NOSE WHEEL	$W_N =$	$L_N = -$ negative arm	-
	TOTAL	Empty weight: $W_{TE} =$	C.G. = mm % MAC	Aircraft moment: $M_{TE} =$

**NOTE:**

Empty weight is including oil, coolant, hydraulic fluid and unusable fuel.

Empty weight C.G. range : 420 to 442.5 mm / 28 to 29.5 % of MAC

Operating C.G. range : 405 to 525 mm / 27 to 35 % of MAC

MAC : 1,500 mm

MOMENT (kg mm) = WEIGHT (kg) x ARM (mm)

$$\text{AIRCRAFT EMPTY WEIGHT C.G.} = \frac{M_{TE}}{W_{TE}} \text{ (mm)} \times \frac{100}{\text{MAC}} \text{ (\% of MAC)}$$

<b>Registration:</b>
<b>Serial No.:</b>
<b>Date:</b>
<b>By:</b>

## 6.6 Loading and C.G. check

Before flight is important to determine that the aircraft is loaded so its weight and C.G. location are within the allowable limits.

Aircraft loading and C.G. determination perform as follows:

1. Record actual empty weight, arm and moment to the table.
2. Record weights of pilot, passenger, baggage and fuel to the table.
3. Calculate and record moment for each item using the following formula:

$$MOMENT (kg mm) = WEIGHT (kg) \times ARM (mm)$$

4. Calculate and record total weight and moment.
5. Determine and record aircraft C.G. using the following formula:

$$AIRCRAFT C.G. = \frac{M_T}{W_T} (mm) \times \frac{100}{MAC} (\%) \text{ of MAC}$$

6. If loading or C.G. calculation results exceed maximum permitted values, reduce baggage or fuel weight and repeat calculation.
7. It is important to perform loading and C.G. check without fuel (in case of total fuel depletion) – most rearward C.G. check.

### Loading and C.G. check table

<b>ITEM</b>	<b>WEIGHT</b> kg	<b>ARM</b> mm	<b>MOMENT</b> kg mm
<b>EMPTY AIRCRAFT</b>			
<b>PILOT</b>		700	
<b>PASSENGER</b>		700	
<b>BAGGAGE COMPARTMENT</b>		1,310	
<b>WING LOCKERS</b>		600	
<b>FUEL IN TANKS</b>		180	
<b>TOTAL</b>	<b>W<sub>T</sub>=</b>	<b>C.G. =</b> mm % MAC	<b>M<sub>T</sub>=</b>

**Example of Loading and C.G. check**

Aircraft empty data:

weight..... 387.0 kg  
 arm..... 432.4 mm  
 moment..... 167,329.0 kg mm  
 MAC ..... 1,500 mm

Operating weights:

pilot ..... 85.0 kg  
 passenger ..... 65.0 kg  
 baggage in cockpit..... 10.0 kg  
 baggage in wing lockers ..... 10.0 kg  
 fuel in tanks..... 43.0 kg (60 L)

**Loading and C.G. check table**

<b>ITEM</b>	<b>WEIGHT</b> kg	<b>ARM</b> mm	<b>MOMENT</b> kg mm
<b>EMPTY AIRCRAFT</b>	387.0	432.4	167,329.0
<b>PILOT</b>	85.0	700	59,500.0
<b>PASSENGER</b>	65.0	700	45,500.0
<b>BAGGAGE COMPARTMENT</b>	10.0	1,310	13,100.0
<b>WING LOCKERS</b>	10.0	600	6,000.0
<b>FUEL IN TANKS</b>	43.0	180	7,740.0
<b>TOTAL</b>	<b><math>W_T = 600.0</math></b>	<b>C.G. = 498.6 mm</b> <b>33.2 % MAC</b>	<b><math>M_T = 299,169.0</math></b>



**Loading and C.G. check table – zero fuel**

<b>ITEM</b>	<b>WEIGHT</b> kg	<b>ARM</b> mm	<b>MOMENT</b> kg mm
<b>EMPTY AIRCRAFT</b>	387.0	432.4	167,329.0
<b>PILOT</b>	85.0	700	59,500.0
<b>PASSENGER</b>	65.0	700	45,500.0
<b>BAGGAGE COMPARTMENT</b>	10.0	1,310	13,100.0
<b>WING LOCKERS</b>	10.0	600	6,000.0
<b>FUEL IN TANKS</b>	0.0	180	0.0
<b>TOTAL</b>	<b><math>W_T = 557.0</math></b>	<b>C.G. = 523.2 mm</b> <b>34.9 % MAC</b>	<b><math>M_T = 291,429.0</math></b>

**Blank form of Loading and C.G. check**

**WEIGHT & BALANCE RECORD**

**Aircraft C.G. check table**

<b>ITEM</b>	<b>WEIGHT</b> kg	<b>ARM</b> mm	<b>MOMENT</b> kg mm
<b>EMPTY AIRCRAFT</b>			
<b>PILOT</b>		700	
<b>PASSENGER</b>		700	
<b>BAGGAGE COMPARTMENT</b>		1,310	
<b>WING LOCKERS</b>		600	
<b>FUEL IN TANKS</b>		180	
<b>TOTAL</b>	<b><math>W_T =</math></b>	<b>C.G. =</b> mm % MAC	<b><math>M_T =</math></b>

**NOTE:**

Empty weight is including oil, coolant, hydraulic fluid and unusable fuel.

Maximum fuel quantity in wing tanks (114L=82.1kg) is used for most forward C.G. calculation.

Zero fuel quantity in wing tanks is used for most rearward C.G. calculation (in case of total fuel depletion).

**Max. takeoff weight :** 600 kg

**Max. weight in baggage compartment :** 18 kg

**Max. weight in each wing locker :** 10 kg

**Empty weight C.G. range :** 420 to 442.5 mm / 28 to 29.5 % of MAC

**Operating C.G. range :** 405 to 525 mm / 27 to 35 % of MAC

**MAC :** 1,500 mm


MOMENT (kg mm) = WEIGHT (kg) x ARM (mm)

$$\text{AIRCRAFT C.G.} = \frac{M_T}{W_T} \text{ (mm)} \times \frac{100}{\text{MAC}} \text{ (\% of MAC)}$$

<b>Registration:</b>
<b>Serial No.:</b>
<b>Date:</b>
<b>By:</b>


### 6.7 Fuel weight – quantity conversion chart

FUEL WEIGHT - QUANTITY CONVERSION CHART

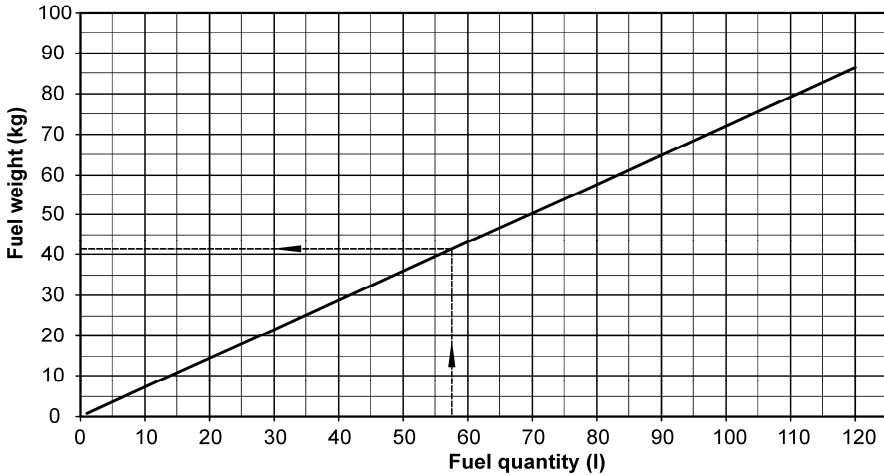

### 6.8 C.G. change in dependence of fuel quantity

C.G. CHANGE IN DEPENDENCE OF FUEL QUANTITY

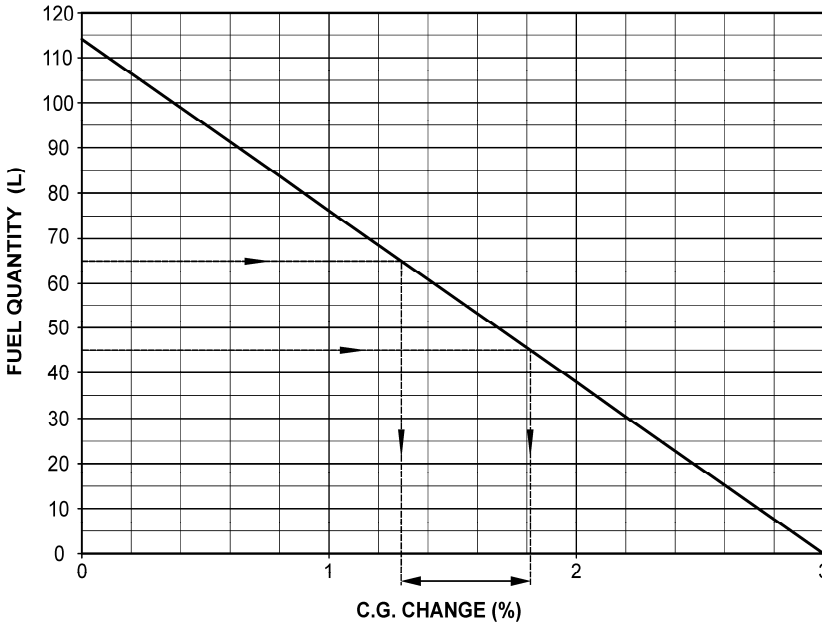

## 6.9 Load sheet and Balance chart

This chart makes possible to perform loading and C.G. check before flight simply and quickly. The undermentioned example shows how to use this chart. Perform following steps:

1. Record Empty weight and Empty C.G. (% of MAC) to the table.
2. Record the other used weight items to the table.
3. Calculate Total weight and record to the table.
4. Calculate Zero fuel weight record to the table – it is total weight without fuel weight (for most rearward C.G. check - in case of total fuel depletion).
5. The starting position line drawing is the intersection point of empty weight with empty C.G. marked as ①.
6. Go vertically down to the pilot weight scale, than continue horizontally to the right direction and pilot weight add. This is the point ②.
7. Repeat step 6 for the other used weight items (point ③ ④ ⑤) except fuel weight that is subtracted to the left direction to the point ⑥.
8. Go vertically down to the larger Aircraft C.G. chart to the crossing with Total weight line. This is the point ⑦ - actual Aircraft C.G. location in % of MAC - for takeoff.
8. In the end go vertically down from point ⑤ to the larger Aircraft C.G. chart to the crossing with Zero fuel weight line. This is the point ⑧ most rearward aircraft C.G. in % of MAC - without fuel.

F-C-03AM

### LOAD SHEET & BALANCE CHART

NOTE: EMPTY C.G. RANGE 28 - 29.5% MAC  
 OPERATING C.G. RANGE 27 - 35% MAC  
 MAX. TAKEOFF WEIGHT 600 kg  
 MIN. PILOT WEIGHT 55 kg

REGISTRATION: <b>EXAMPLE :</b>		% MAC
EMPTY C.G.	28,8	5 kg $\Delta$
ITEM	ITEM WEIGHT	SCALE DIVISION AND MOTION DIRECTION
AIRCRAFT EMPTY	387 kg	5 kg $\Delta$
PILOT	85 kg	5 kg $\Delta$
PASSENGER	65 kg	5 kg $\Delta$
BAGGAGE IN BAGG. COMPARTMENT	10 kg	1 kg $\Delta$
BAGGAGE IN WING-LOCKERS	10 kg	5 kg $\Delta$
FUEL IN TANKS	43 kg	5 kg $\nabla$
TAKEOFF WEIGHT	600 kg	
ZERO FUEL WEIGHT	557 kg	

NOTE: CONVERSION OF THE FUEL VOLUME TO WEIGHT UNIT:  
 1 LITER = 0.72 kg

DATE: \_\_\_\_\_

PILOT: \_\_\_\_\_

SIGNATURE: \_\_\_\_\_

**SECTION 6  
WEIGHT & BALANCE**

**PS-POH-P1001061**



**Blank form of Load sheet & Balance chart**

REGISTRATION:			
EMPTY C.G.	ITEM	ITEM WEIGHT	SCALE DIVISION AND MOTION DIRECTION
	AIRCRAFT EMPTY		
	PILOT		5 kg ▷
	PASSENGER		5 kg ▷
	BAGGAGE IN BAGG. COMPARTMENT		1 kg ▷
	BAGGAGE IN WING LOCKERS		5 kg ▷
	FUEL IN TANKS		5 kg ▷
	TAKEOFF WEIGHT		
	ZERO FUEL WEIGHT		

NOTE:  
CONVERSION OF THE FUEL VOLUME TO WEIGHT UNIT:  
1 LITER = 0.72 kg

DATE : \_\_\_\_\_

PILOT: \_\_\_\_\_

SIGNATURE: \_\_\_\_\_

WEIGHT [kg]	CENTRE OF GRAVITY [% MAC]
550	
600	27
400	28
420	29
450	30
480	31
500	32
520	33
540	34
560	35

**F-C-03AM**

**LOAD SHEET & BALANCE CHART**

NOTE: OPERATING C.G. RANGE 28 - 29.5% MAC  
 OPERATING C.G. RANGE 27 - 35% MAC  
 MAX TAKEOFF WEIGHT 600 kg  
 MIN. PILOT WEIGHT 55 kg

## ***6.10 Installed equipment list***

**NOTE**

*Actual Installed equipment list is shown in Section 9, Supplement No. 02.*

*Intentionally left blank*



# **SECTION 7**

## **TABLE OF CONTENTS**

### **7. DESCRIPTION OF AIRPLANE AND SYSTEMS**

<b>7.1</b>	<b>General</b>	<b>7-2</b>
<b>7.2</b>	<b>Airframe</b>	<b>7-2</b>
<b>7.3</b>	<b>Flight controls</b>	<b>7-2</b>
<b>7.4</b>	<b>Instrument panel</b>	<b>7-3</b>
<b>7.5</b>	<b>Engine</b>	<b>7-3</b>
<b>7.6</b>	<b>Propeller</b>	<b>7-4</b>
<b>7.7</b>	<b>Landing gear</b>	<b>7-5</b>
<b>7.8</b>	<b>Baggage compartment</b>	<b>7-5</b>
<b>7.9</b>	<b>Seats and safety harnesses</b>	<b>7-5</b>
<b>7.10</b>	<b>Canopy</b>	<b>7-6</b>
<b>7.11</b>	<b>Fuel system</b>	<b>7-6</b>
<b>7.12</b>	<b>Electrical system</b>	<b>7-7</b>
<b>7.13</b>	<b>Flight instruments and Avionics</b>	<b>7-7</b>
<b>7.14</b>	<b>Pitot-static system</b>	<b>7-7</b>
<b>7.15</b>	<b>Ballistic Recovery System</b>	<b>7-8</b>

## 7. DESCRIPTION OF AIRPLANE AND SYSTEMS

### 7.1 *General*

This section provides description and operation of the aircraft and its systems.

*PiperSport* aircraft is a single-engine, all metal, low-wing monoplane of semi-monocoque structure with two side-by-side seats. The airplane is equipped with a fixed tricycle undercarriage with castoring nose wheel.

Some parts of airplane are made from fiberglass laminate.

The cockpit is fitted by flight and engine analog instruments.

### 7.2 *Airframe*

All-metal construction, stressed skin, single curvature metal skins riveted to stiffeners. Construction is of 6061-T6 aluminum sheet metal riveted to aluminum angles with Avex rivets. This high strength aluminum alloy construction provides long life and low maintenance costs thanks to its durability and corrosion resistance characteristics.

The wing has a high lift airfoil equipped with flaps.

### 7.3 *Flight controls*

The aircraft is equipped with a dual stick control, the adjustable rudder pedals with pedal hydraulic brakes for easy ground control of the castoring nose wheel.

Lateral and longitudinal control movement is transferred by mechanical system of pull rods and levers.

Rudder control is controlled by pedals of foot control. The rudder is interconnected with foot control pedals by cable system.

The rudder pedals setting levers are located in the left and right corner under and slightly behind the instrument panel.

Wing flaps are electrically actuated by the rocker switch located on the middle panel. The wing flaps position indicator is located on the middle panel next to the rocker switch.

The elevator and aileron trim tabs are electrically actuated by buttons on the control stick. Elevator and aileron trim position indicators are located on the middle panel. Aileron trim tab position can be checked visually from cockpit by view to the right.

## 7.4 Instrument panel

**NOTE**

*Actual Instrument panel layout and Description of instrumentation and controls in the cockpit are shown in Section 9, Supplement No. 2.*

## 7.5 Engine

ROTAX 912 ULS2 engine with maximum power 73.5 kW is installed in this aircraft. Rotax 912 ULS2 is a 4-stroke, 4-cylinder, horizontally opposed, spark ignition engine with one central camshaft-push-rod-OHV. Liquid cooled cylinder heads and ram air cooled cylinders.

Dry sump forced lubrication. Dual contactless capacitor discharge ignition. The engine is fitted with an electric starter, AC generator and mechanical fuel pump. Prop drive via reduction gear with integrated shock absorber.

For information about engine performance, speeds and limits see:

- *Section 2, chapter 2.12 “Engine operating speeds and limits” in this POH*
- *Rotax “Operator’s manual” for engine type 912 series*

### Engine controls

#### **Throttle and Choke**

Engine power is controlled by means of the THROTTLE lever and the CHOKE lever which are positioned in the middle channel between the seats side by side. Both levers are mechanically connected (*by cable*) to the flap on the carburetors. Springs are added to the throttle push rods to ensure that the engine will go to full power if the linkages fail.

### ***Carburetor preheating***

The heated air is streaming from a heat exchanger to the carburetor through the airbox. The control lever is installed on the middle panel.

### ***Ignition switch***

Ignition switch must be on **BOTH** position to operate the engine. For safety remove the key when engine is not running.

**NOTE**

*Ignition system is independent of the power source and will operate even with Master switches and/or breakers OFF.*

## **Engine instruments**

The following analog engine instruments are located on the right side of instrument panel:

- engine speed
- oil pressure and temperature
- cylinder head temperature
- fuel pressure

For information about engine instruments range and markings see:

- Section 2, chapter 2.13 “Engine instruments markings”.

## **7.6 Propeller**

Standard **WOODCOMP KLASSIC 170/3/R** three composite blades ground adjustable propeller is installed. The propeller diameter is *1,712 mm*.

**NOTE**

*For technical data refer to documentation supplied by the propeller manufacturer.*

## 7.7 Landing gear

Aircraft is equipped with tricycle landing gear.

Main landing gear uses two fiberglass spring elements. Each main gear wheel is equipped with an independent, hydraulically operated, disc type brakes. Nose wheel is free casting. Steering is accomplished by differential application of individual main gear brakes.

## 7.8 Baggage compartment

The rear baggage compartment is located behind seats. It may accommodate up to 18 kg.

Baggage may also be loaded into the baggage compartment inside each wing up to 20 kg, in each wing locker.

Make sure that baggage does not exceed maximum allowable weight, and that the aircraft C.G. is within limits with loaded baggage.

**NOTE**

*The baggage compartments in wing lockers are not waterproof.*

**CAUTION**

*All baggage must be properly secured.*

## 7.9 Seats and safety harnesses

Side-by-side seating. Seat cushions are removable for easy cleaning and drying. Four point safety belts provided to each seat. Additional seat upholstery to raise the small pilot or move him forward is optional.

**NOTE**

*Prior to each flight, ensure that the seat belts are firmly secured to the airframe and that the belts are not damaged. Adjust the buckle to a central position on the body.*

## 7.10 Canopy


Access to the cabin is from both sides. Make sure that the canopy is latched and mechanism is securely locked into position on both sides before operating the aircraft and manually check the canopy is locked by pushing the canopy upward.

## 7.11 Fuel system

Each tank is equipped with a vent outlet, finger screen filter and float sensor. Drain valve located in the lowest point of the each tank and on the bottom edge of the bulkhead, on the gascollator. Fuel selector valve is on the central console in the cockpit. The electric fuel pump is located on bulkhead and it is used for fuel line filling before engine starting. *Fuel return hose goes from the fuel pump into the left tank.*

### CAUTION

*During operation, fuel valve shall be in **LEFT** or **RIGHT** tank position (position on green mark).*

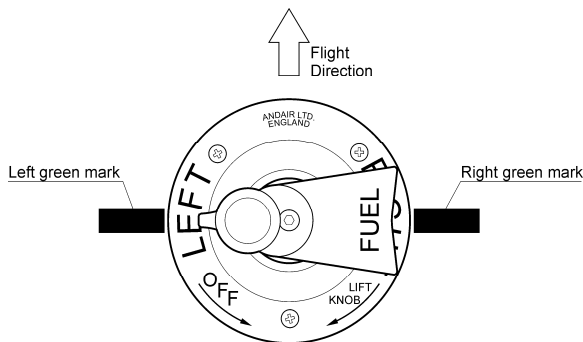

### NOTE

*Fuel is not closed when the fuel valve is in upper half between **LEFT** and **RIGHT** tank positions.*

*If left tank is full, start engine with the fuel selector set to **LEFT**. If you would start the engine with the fuel selector set to **RIGHT** and the left tank is full, than fuel bleed from the left tank vent may occur because a fuel return hose is led only into the left tank and returning fuel will overfill the left tank.*

**CAUTION**

*Do not overfill the tanks to avoid fuel overflow through venting tubes.*

## 7.12 Electrical system

### Generator

The AC generator (250 W AC) is integrated in the engine and it is connected to the electric bus through the external rectifier regulator (12 V 20 A DC).

### Battery

The 12 V battery is mounted on the front side of forward bulkhead.

### Master switch

**MASTER** switch-circuit breaker connects the 12 V battery to the electrical system.

### Circuit breakers and switches

**NOTE**

*Circuit breakers and switches description is shown in Section 9, Supplement No. 02.*

## 7.13 Instruments and Avionics

**NOTE**

*Instruments and avionics description is shown in Section 9, Supplement No. 02.*

**NOTE**

*For instruments and avionics operating instructions refer to the documentation supplied with the instruments and avionics.*

## 7.14 Pitot-static system

Standard **AVIATIK WA037383 pitot-static probe** is located below the left wing. Pressure distribution to the instruments is through flexible plastic hoses. Keep the pitot head clean to ensure proper function of the system.

## ***7.15 Ballistic Recovery System***

The airplane is equipped with the BRS emergency parachute system.

BRS utilize a manually activated, solid propellant rocket motor to extract a round, non-steerable parachute and recover the aircraft in life-threatening emergency situations.

The parachute with harnesses and the rocket are installed aft of the firewall. Activating handle is located on the middle channel.



# **SECTION 8**

## **TABLE OF CONTENTS**

### **8. HANDLING AND SERVICING**

<b>8.1</b>	<b>Introduction</b>	<b>8-2</b>
<b>8.2</b>	<b>Ground handling</b>	<b>8-2</b>
<b>8.3</b>	<b>Towing instructions</b>	<b>8-3</b>
<b>8.4</b>	<b>Tie-down instructions</b>	<b>8-3</b>
<b>8.5</b>	<b>Servicing operating fluids</b>	<b>8-4</b>
<b>8.6</b>	<b>Cleaning and care</b>	<b>8-6</b>
<b>8.7</b>	<b>Assembly and disassembly</b>	<b>8-6</b>
<b>8.8</b>	<b>Aircraft inspection periods</b>	<b>8-6</b>
<b>8.9</b>	<b>Aircraft alterations or repairs</b>	<b>8-7</b>

## 8. HANDLING AND SERVICING

### 8.1 Introduction

This section contains factory-recommended procedures for proper ground handling and servicing of the airplane. It also identifies certain inspection and maintenance requirements, which must be followed if the airplane is to retain that new-plane performance and dependability.

### 8.2 Ground handling

#### 8.2.1 Parking

It is advisable to park the airplane inside a hangar or alternatively inside any other suitable space (*garage*) with stable temperature, good ventilation, low humidity and dust-free environment.

It is necessary to moor the airplane when it is parked outside a hangar. Also when parking for a long time, cover the cockpit canopy, possibly the whole airplane by means of a suitable tarpaulin.

#### 8.2.2 Jacking

Since the empty weight of this aircraft is relatively low, two people can lift the aircraft easily. First of all prepare two suitable supports to support the aircraft. It is possible to lift the aircraft by handling the following parts:

- By pushing the fuselage rear section down in the place of a bulkhead the fuselage front section may be raised and then supported under the firewall.
- By holding the fuselage rear section under a bulkhead the fuselage rear may be raised and then supported under that bulkhead.
- To lift up a wing, push from underneath that wing **only** at the main spar area. Do not lift up a wing by handling the wing tip.

#### 8.2.3 Road transport

The aircraft may be transported after loading on a suitable car trailer. It is necessary to dismantle the wings before road transport. The aircraft and dismantled wings should be attached securely to protect these parts against possible damage.

### 8.3 Towing instructions

To handle the airplane on ground use the *Tow Bar*, or if pushing the airplane by hand, push on the aft fuselage, placing your hands over an area of skin supported by a bulkhead.

#### **CAUTION**

*Do not push or pull on the propeller or on the control surfaces when towing. You can damage the propeller and the control surfaces.*

*Avoid excessive pressure at the airplane airframe. Keep all safety precautions, especially in the propeller area.*

*Always use tow bar for direction control when pushing the airplane.*

### 8.4 Tie-down instructions

The airplane should be moored when parked outside a hangar after the flight day. The mooring is necessary to protect the airplane against possible damage caused by wind and gusts.

For this reason the aircraft is equipped with mooring eyes located on the lower surfaces of the wings.

#### **Tie-down procedures:**

1. **FUEL** selector - **OFF**
2. **MASTER** - OFF
3. Other switches - OFF
4. Ignition Switch - **OFF**
5. Control stick - fix using e.g. safety harness
6. Air vent - close
7. Canopy - close and lock
8. Moor the aircraft to the ground by means of a mooring rope passed through the mooring eyes located on the lower surfaces of the wings and below rear fuselage.

#### **NOTE**

*In the case of long term parking, especially during winter, it is recommended to cover the cockpit canopy or possibly the whole aircraft by means of a suitable tarpaulin attached to the airframe.*

## 8.5 Servicing operating fluids

See appropriate chapters in the ROTAX engine Maintenance and Operator's manuals and *PiperSport* aircraft Maintenance manual for more instructions.

### 8.5.1 Approved fuel grades and specifications

#### Recommended fuel type:

*(refer to the ROTAX Operator's manual, Rotax Service Instruction SI-912-016)*

#### MOGAS

European standards - min. RON 95, EN 228 Super, EN 228 Super plus

US standard - ASTM D4814

Canadian standards - min. AKI 91, CAN/CGSB-3.5 Quality 3

#### **CAUTION**

*Fuels that contain more than 5 % ethanol blend have not been tested and are not permitted for use.*

#### AVGAS

US standard - AVGAS 100 LL (ASTM D910)

AVGAS 100 LL places greater stress on the valve seats due to its high lead content and forms increased deposits in the combustion chamber and lead sediments in the oil system. Thus it should only be used in case of problems with vapor lock or when other types of gasoline are unavailable.

#### **Fuel volume:**

Wing fuel tanks volume ..... 2x 57 L

Unusable fuel quantity ..... 2x 0.5 L

### 8.5.2 Approved oil grades and specifications

#### Recommended oil type:

*(refer to the Rotax Operator's manual, Rotax Service Instruction SI-912-016)*

Motorcycle 4-stroke engine oil of registered brand with gear additives.

Use only oil with API "SG" classification or higher!

Use multi-grade oil. Use of mineral oil is not recommended.

#### **Type of oil used by aircrafts manufacturer:**

- see Section 9, Supplement No. 02

**Oil volume:**

Minimum ..... 3.3 L

Maximum ..... 3.8 L

**8.5.3 Approved coolant grades and specifications**

**Recommended coolant type:**

*(refer to the Rotax Operator's manual, Rotax Installation manual, Rotax Service Instruction SI-912-016)*

In principle, 2 different types of coolant are permitted:

- Conventional coolant based on ethylene glycol
- Waterless coolant based on propylene glycol

**WARNING**

*The coolant concentrate (propylene glycol) may not be mixed with conventional (glycol/water) coolant or with additives!*

*Non observance can lead to damages to the cooling system and engine.*

**Type of coolant used by aircrafts manufacturer:**

- see Section 9, Supplement No. 02

**Coolant liquid volume:**

It is approximately..... 2.5 L

## 8.6 *Cleaning and care*

Use efficient cleaning detergents to clean the aircraft surface. Oil spots on the aircraft surface (*except the canopy!*) may be cleaned with petrol.

The canopy may only be cleaned by washing it with a sufficient quantity of lukewarm water and an adequate quantity of detergents. Use either a soft, clean cloth sponge or deerskin. Then use suitable polishers to clean the canopy.

### **CAUTION**

*Never clean the canopy under “dry” conditions and **never** use petrol or chemical solvents!*

Upholstery and covers may be removed from the cockpit, brushed and eventually washed in lukewarm water with an adequate quantity of detergents. Dry the upholstery thoroughly before insertion into the cockpit.

### **CAUTION**

*In the case of long term parking, cover the canopy to protect the cockpit interior from direct sunshine.*

## 8.7 *Assembly and disassembly*

Refer to the *PiperSport* aircraft Maintenance manual and the aircraft Assembly photo manual.

## 8.8 *Aircraft inspection periods*

Periods of overall checks and contingent maintenance depends on the condition of the operation and on overall condition of the airplane.

Inspections and revisions should be carried out in the periods listed in:

- *PiperSport aircraft Maintenance manual* for aircraft maintenance.
- *Rotax engine Maintenance manual* for engine maintenance.
- *Woodcomp KLASSIC propeller manual* for propeller maintenance.

### **NOTE**

*Aircraft maintenance should be made in accordance with AC 43.13-1B.*

## 8.9 *Aircraft alternations or repairs*

It is recommended to contact the airplane manufacturer prior to any alternations to the aircraft to ensure that the airworthiness of the aircraft is not violated. Always use only the original spare parts produced by the airplane (engine, propeller) manufacturer.

If the aircraft weight is affected by any alternation, a new weighing is necessary, then record the new empty weight into the Weight and Balance record.

**NOTE**

*Aircraft repairs should be made in accordance with AC 43.13-1B.*

*Intentionally left blank*



# **SECTION 9**

## **TABLE OF CONTENTS**

### **9. SUPPLEMENTS**

<b>9.1 List of inserted supplements</b>	<b>9-2</b>
<b>9.2 Inserted supplements</b>	<b>9-2</b>

## 9. SUPPLEMENTS

This section contains the appropriate supplements necessary to safely and efficiently operate the aircraft when equipped with various optional systems and equipment not provided with the standard airplane.

### 9.1 *List of inserted supplements*

Suppl. No.	Title of supplement	Inserted	Date	Rev. No.
02	Aircraft specification S/N: P1001061	yes	2016-02-05	-

### 9.2 *Inserted Supplements*

## ***Supplement No. 2***

### ***Classical instruments equipment package***

In this Supplement No. 2 - the Weight & Balance & Equipment is shown for real S/N of the aircraft.

Aircraft Registration number : **HB - WYL**

Aircraft Serial Number : **P1001061**

This Supplement must be attached to the POH during airplane operation.

Information in this Supplement completes or replaces information in the basic POH for the below mentioned parts only. Limitations, procedures and information not mentioned in this Supplement and included in the basic POH stay valid.

This Supplement completes information necessary for the airplane operation with equipment installed on the airplane.

## RECORD OF REVISIONS

Rev. No.	Affected pages	Revision name	Approved	Date

## 6. WEIGHT AND BALANCE

### 6.5 C.G. range and determination

#### 6.5.2 Aircraft C.G. determination

#### WEIGHT & BALANCE RECORD

Empty weight C.G. determination table

AIRCRAFT EMPTY C.G.	ITEM	WEIGHT kg	ARM mm	MOMENT kg mm
	RIGHT MAIN WHEEL	$W_{R=}$ 148.10	$L_{R=}$ 800	118,480.00
	LEFT MAIN WHEEL	$W_{L=}$ 148.05	$L_{L=}$ 790	116,959.50
	NOSE WHEEL	$W_{N=}$ 98.20	$L_{N=}$ - 710 negative arm	- 69,722.00
<b>TOTAL</b>	<b>Empty weight:</b> $W_E =$ 394.35	<b>C.G. =</b> 420.2 mm 28.0 % MAC	<b>Aircraft moment:</b> $M_E =$ 165,717.50	

**NOTE:**

Empty weight is including oil, coolant, hydraulic fluid and unusable fuel.

**Empty weight C.G. range :** 420 to 442.5 mm / 28 to 29.5 % of MAC

**Operating C.G. range :** 405 to 525 mm / 27 to 35 % of MAC

**MAC :** 1,500 mm

$$\text{MOMENT (kg mm)} = \text{WEIGHT (kg)} \times \text{ARM (mm)}$$

$$\text{AIRCRAFT EMPTY WEIGHT C.G.} = \frac{M_{TE}}{W_{TE}} \text{ (mm)} \times \frac{100}{\text{MAC}} \text{ (\% of MAC)}$$

<b>Registration:</b>	HB - WYL
<b>Serial No.:</b>	P1001061
<b>Date:</b>	2016-01-15
<b>By:</b>	Staude, Bylang

## 6.10 Installed equipment list

### *of PiperSport aircraft S/N: P1001061*

- *Rotax 912 ULS2 with airbox*
- *Woodcomp KLASSIC 170/3/R*
- *Airspeed indicator*
- *Altimeter*
- *Vertical speed indicator*
- *CM-24 Magnetic compass*
- *Electric Attitude indicator*
- *Electric turn coordinator*
- *Electric directional gyro*
- *Course deviation indicator*
- *Winter FSMZ Flight time counter*
- *Garmin SL30 transceiver*
- *PS Engineering PM3000 intercom*
- *Garmin GTX328 transponder*
- *Sandia SAE5-35 altitude encoder*
- *King AK451 ELT*
- *AirGizmos, Garmin 495 GPS*
- *Antennas*
- *Engine RPM indicator*
- *Oil pressure and temperature gauges*
- *CHT indicator*
- *Fuel pressure and quantity gauges*
- *Voltmeter*
- *Engine hours counter*
- *Manifold pressure gauge*
- *G -205 trim control and PTT on the control sticks*
- *Trims and flaps electrically actuated*
- *Kuntzleman wing tip strobe/nav. lights*
- *Kuntzleman tail nav. light*
- *Landing light in cowl*
- *Adjustable pedals*
- *Dual hydraulic brakes*
- *Parking brake*
- *Wheel fairings tricycle*
- *Cabin heating*
- *Carburetor preheating*
- *Leather upholstery*
- *Paint*
- *Sunshade*
- *BRS LSA softpack parachute*

## 7. DESCRIPTION OF AIRPLANE AND SYSTEMS

### 7.4 Instrument panel

Instrument panel layout of *PiperSport* aircraft S/N: P1001061



**Description of instrumentation and controls in the cockpit**

1	<i>Parking brake</i>	23	<i>Engine hours counter</i>
2	<i>Vertical speed indicator</i>	24	<i>MASTER circuit breaker*</i>
3	<i>Electric turn coordinator</i>	25	<i>PTT / elevator trim / aileron trim buttons</i>
4	<i>Airspeed indicator</i>	26	<i>Switches*</i>
5	<i>Electric directional gyro</i>	27	<i>Ignition switch</i>
6	<i>Low voltage warning light</i>	28	<i>PS Intercom</i>
7	<i>Fuel pump operation lamp</i>	29	<i>Elevator trim indicator</i>
8	<i>Electric attitude indicator</i>	30	<i>BRS release handle</i>
9	<i>Course deviation indicator</i>	31	<i>Flaps control switch</i>
10	<i>Altimeter</i>	32	<i>Flaps position indicator</i>
11	<i>Transceiver</i>	33	<i>Throttle</i>
12	<i>Garmin GPS</i>	34	<i>Choke</i>
13	<i>Compass</i>	35	<i>Fuel selector valve</i>
14	<i>Fuel pressure gauge</i>	36	<i>Socket 12V</i>
15	<i>Engine RPM indicator</i>	37	<i>Carburetors preheating</i>
16	<i>Manifold pressure gauge</i>	38	<i>Cabin heating</i>
17	<i>Oil pressure gauge</i>	39	<i>Aileron trim indicator</i>
18	<i>ELT control unit and buzzer</i>	40	<i>Transponder</i>
19	<i>Oil temperature gauge</i>	41	<i>Circuit breakers*</i>
20	<i>Fuel quantity indicator – RH tank</i>	42	<i>Fuel quantity indicator – LH tank</i>
21	<i>CHT indicator</i>	43	<i>Flight time counter</i>
22	<i>Voltmeter</i>		

\* Switches and circuit breakers detailed description is in this Supplement, page 7.



## 7.12 Electrical system

### Circuit breakers and switches

<b>LEFT PART OF INSTRUMENT PANEL</b>	<b>MASTER</b>		circuit breaker	25A
	<b>ENG.INST.</b>	- engine instruments	switch	-
	<b>AVIONICS</b>	- transceiver - intercom - transponder - GPS	switch	-
	<b>FLIGHT INST.</b>	- attitude indicator - turn coordinator - directional gyro - CDI	switch	-
	<b>FUEL P.</b>	- fuel pump	switch	-
	<b>STROBE</b>	- strobe lights	switch	-
	<b>NAV.L.</b>	- navigation lights	switch	-
	<b>LDG.L.</b>	- landing light	switch	-
<b>RIGHT PART OF INSTRUMENT PANEL</b>	<b>PWR</b>	- power (generator)	circuit breaker	25A
	<b>ATT</b>	- attitude indicator	circuit breaker	1A
	<b>DG</b>	- directional gyro	circuit breaker	2A
	<b>TB</b>	- turn coordinator	circuit breaker	1A
	<b>NAV</b>	- transceiver - navigation device	circuit breaker	2A
	<b>COMM</b>	- transceiver - communication device	circuit breaker	5A
	<b>GPS</b>		circuit breaker	1A
	<b>XPDR</b>	- transponder	circuit breaker	5A
	<b>IC</b>	- intercom	circuit breaker	1A
	<b>ENG.INST.</b>	- engine instruments	circuit breaker	1A
	<b>FUEL P.</b>	- fuel pump	circuit breaker	3A
	<b>FLAPS</b>		circuit breaker	3A
	<b>TRIM</b>	- aileron trim - elevator trim	circuit breaker	1A
	<b>NAV.L.</b>	- navigation lights	circuit breaker	1A
	<b>STROBE</b>	- strobe lights	circuit breaker	3A
	<b>LDG.L.</b>	- landing light	circuit breaker	4A
<b>12V</b>	- 12V socket	circuit breaker	5A	

## **7.13 Instruments and Avionics**

The aircraft is equipped with instruments as follows:

- Airspeed indicator**
- Altimeter**
- Vertical speed indicator**
- Vertical card compass**
- Electric attitude indicator**
- Electric directional gyro**
- Electric turn coordinator**
- Course deviation indicator**
- Flight time counter**
- Engine RPM indicator**
- Oil pressure and temperature gauges**
- Fuel pressure and quantity gauges**
- CHT indicator**
- Manifold pressure gauge**
- Voltmeter**
- Engine hours counter**

The aircraft is equipped with avionics as follows:

- Transceiver - Garmin SL30**
- Intercom - PS Engineering PM3000**
- Transponder - Garmin GTX328**
- GPS - Garmin 495**
- ELT - King AK451**

**NOTE**

*For instruments and avionics operating instructions refer to the documentation supplied with the instruments and avionics.*

## 8. HANDLING AND SERVICING

### 8.5 *Servicing operating fluids*

#### 8.5.2 Approved oil grades and specifications

**Type of oil used by aircrafts manufacturer:**

AeroShell Oil Sport Plus 4

SAE: 10W-40, API: SL

#### 8.5.3 Approved coolant grades and specifications

**Type of coolant used by aircrafts manufacturer:**

Specification: ASTM D 3306, VW TL 774C

Mixture ratio coolant / water: 50/50 %

Max. coolant temperature: 120 °C

*Intentionally left blank*